

INTRODUCTION	PAGE 6
Product Description	6
Intended Use	6
Replacement Parts	6
Using Your Manual	
Manual Glossary	

SAFETY

PAGE 8

Safety Decals	8
Training Required	11
Personal Protective Equipment Requirements	11
Operation Safety	11
Preventing Accidents	12
Keep Riders Off	12
Mounting and Dismounting the Tractor	13
Use Caution On Slopes, Uneven Terrain, and Rough Ground	13
Roadway Safety	13
Truck or Trailer Transport	13
Towing Loads	14
Maintenance Safety	14
Fuel Safety	15
Roll Over Protective Structure (ROPS)	16
Operator Safety Interlock System	17
Testing the Safety Interlock System	17
Testing the Safety Interlock System (continued)	18

OPERATIONAL CONTROLS

PAGE 19

Standard Operational Control Locations	19
Optional Operational Control Locations	20
Optional Operational Control Locations	21
Speedometer Cluster Gauge (A)	22
Tachometer Gauge Cluster (B)	22
Ignition Switch (C)	23
Throttle Lever (D)	23
4 Speed Transmission Gear Shift Lever (F)	23
Parking Brake (G)	23
Front Hydraulic Control Lever (H)	23
Rear Hydraulic Control Lever (I)	23
Choke (J)	24
Electrical System Circuit Breaker (K)	24
Warning Alarm (L)	24
Depth Control Handle (M)	24
Steering Wheel (N)	24
Seat Latch Lever (P)	24
Fuel Shut-off Valve (Q)	24
USB Port (R)	24

Hazard Flasher Switch (AA)	25
Head Light Switch (BB)	25
Implement Light Switch (CC)	25
12 Volt Front Switch (DD) and 4 Pin Socket (OO)	25
Front Work Light Switch (EE)	25
Rear Work Light Switch (FF)	25
Directional Signal Switch (HH)	25
Horn Switch (II)	26
Rear Auxiliary Quick Couplers (LL)	26
12 Volt 7 Pin Socket (NN)	26
Front Auxiliary Quick Couplers (PP)	26
BPTO Control Handle (QQ)	26
Lumbar Support Knob (SS)	26
Seat Back Angle Adjustment Lever (TT)	26
Weight Adjustment Lever (UU)	26
Height Adjustable Backrest (VV)	26
Implement Hoist Hook (WW)	26
Hoist Retaining Pin (XX)	27
Winch Handle (YY)	27
Winch Handle Storage (ZZ)	27

GENERAL OPERATION

Daily Inspection	
Starting The Engine	
Idling The Engine	28
Starting A Stalled Engine	28
Shutting Off The Engine	
Driving The Tractor	29
Stopping The Tractor	29
Emergency Stopping The Tractor	29
Mid Mount Hitch	29
Mid Mount Hitch Attaching	29
Depth Control Lever	29
Rear Hitch	29
Rear Hitch Attaching	29
Implement Hoist	
Belt Drive PTO (BPTO)	
Tractor Track Width Adjustment	
Ballast	32
Driving the Tractor on Roads	32
Towing	32

PAGE 28

PAGE 33

SERVICE

Service And General Maintenance	
Cleaning And Appearance Care	
Service Access Points	33

Lubrication Locations	
Checking Hydraulic Fluid Level	
Checking Engine Oil Level	
Changing Air Filter Elements	
Filling The Fuel Tank	
Checking the Brake Fluid	
Checking the Transmission Fluid	
Checking Drive Belts	40
Adjusting The Drive Belts Tension	40
Adjusting Hydraulic Pump Belt Tension	41
Cleaning Engine Compartment & Engine	
Cleaning The Battery and Terminals	
Charging The Battery	
Jump Starting Procedure	43
Replacing Fuses	43
Replacing Light Bulbs	43
BPTO Belt Inspection	44
Clutch Pedal Adjustment	
Steering Wheel Adjustment	45
Tire Pressure	45
ROPS And Seat Belt Inspection	45
Parking Brake Inspection & Adjustment	46
Storage	46
Preparing the Power Unit for Storage	46
Long Term Storage (4 Months or Longer)	46
Short Term Storage (Less than 4 Months)	46
Removing the Power Unit from Storage	46
Maintenance Schedule	47
Maintenance Checklist	
Tilmor Maintenance Log	49
Tilmor Maintenance Log	50
Engine	51
Engine (Continued)	
Hydraulic	
Electrical	53
Wiring Diagram Reference Key	53
Wiring Circuit - Main Power / Ignition Switch Schematic	54
Wiring Circuit - Gauges / USB / AUX / Misc Fuse Block Schematic	55
Wiring Circuit - Operation Interlock Schematic	
Wiring Circuit - Engine Functions / Diesel - Gas Schematic	57
Wiring Circuit - Head & Tail Light - Directional / Hazards Schematic	58
SPECIFICATIONS	PAGE 59

Engine	
Electrical	
Power Train	59
	•••

Controls & Instrument Panel)
Other Features)
Dimensions)
Load Capacities)
Fluid Capacities & Specifications)

WARRANTY

PAGE 61

Return Policy & Procedure	61
Warranty	61
Non-serialized Product - 1 Year	61
Serialized Product - 2 Year or 1000 hours	61
Tilmor Warranty Policy	61
Tilmor Warranty Procedure	61

INTRODUCTION



ilmor LLC. is pleased to provide you with your new Tilmor tractor!

Please visit our website, www.tilmor.com for a complete list of available Tilmor products, and resources.

Product Description

The Tilmor 520M tractor is the ultimate row crop tractor for diversified farming operations. The Tilmor 520M is highly adaptable to meet the needs of a multitude of crops and cultural practices.

Intended Use

This tractor is designed solely for use in customary agricultural or similar operations. Use of the Tilmor 520 series tractor in any other manner is considered as contrary to the intended use.

Why Do I Need an Operator's Manual?

This manual has been created to help you gain the important knowledge of what is needed to safely operate, maintain, and service your machine. It is divided into sections for convenient reference of the appropriate section.

You must read and understand the operator's manual for each piece of Tilmor equipment you own. Reading the operator's manual will help you become familiar with each specific piece of equipment. Understanding the operator's manual will help you, as well as others, avoid personal injury and/or damage to the equipment. Keep this manual with the machine at all times. The manual should remain with the machine even if it is sold. If this manual becomes damaged or unreadable, it should be replaced immediately. This manual is available on our website at www.tilmor.com

When using a Tilmor attachment, be sure to read and follow the safety and operating instructions of both the power unit and the attachment being used to ensure the safest operation possible.

The information in this manual provides the operator with the safest procedures to operate the machine while getting the maximum use out of the unit. Failure to follow the safety precautions listed in this manual may result in personal injury and/or damage to the equipment.

Replacement Parts

If any component of the 520 series tractor requires replacement, use only original Tilmor replacement parts. Tilmor replacement parts are available on our website at www.tilmor.com or reach a customer service representative at 1-844-255-5864.

Using Your Manual

Throughout this manual, you will encounter special messages and symbols that identify potential safety concerns to help you as well as others avoid personal injury or damage to the equipment.

SYMBOL DEFINITIONS

ATTENTION

This symbol identifies potential health and safety hazards. It marks safety precautions. Your safety and the safety of others is involved.

There are three signal words that describe the level of safety concern: Danger, Warning, and Caution. Safety should always be the #1 priority when working on or operating equipment. Accidents are more likely to occur when proper operating procedures are not followed or inexperienced operators are involved.

Note: Right-Hand and Left-Hand orientations may be referred to at different places throughout this manual. Right-Hand and Left-Hand is determined as if facing forward from the operator station.

SIGNAL WORD DEFINITIONS

A DANGER

Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury. This signal word is limited to the most extreme cases.

WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury and/or property damage. It may also be used to alert against unsafe practices.

Manual Glossary

- **Implement** A piece of Tilmor equipment that requires a Tilmor tractor for operation.
- Accessory A device that attaches to a Tilmor tractor or Attachment to extend its capabilities.
- Machine Describes any "Implement" or "Accessory" that is used in conjunction with a Tilmor tractor.



Safety Decals

The following safety decals must be maintained on your Tilmor 520M Tractor.

Keep all safety decals legible. Remove all grease, dirt, and debris from safety decals and instructional labels. If any decals are faded, illegible, or missing, visit www.tilmor.com or call 1-844-255-5864 for replacements. When replacement or new components are installed, be sure that current safety decals are affixed to the replacement or new part.



SAFETY



- 1. Read the manual before operating the tractor.
- 2. Wear personal protective equipment, such as safety glasses, closed toe shoes or boots, and ear protection.
- 3. Operators must receive training prior to operating the machine.
- 4. Do not operate with shields or guards removed.
- 5. Slow down and use caution when turning the tractor. Operators must ensure that the ROPS is in the raised and locked position during operation.
- 6. WARNING: Keep a safe distance from the edge of drop -offs, ditches, and embankments. The machine could roll over if a wheel drops over the edge or if the edge caves in.
- 7. Do not carry passengers. Stop the machine if someone
- 8. Set the parking brake and lower implements and shut off the engine before dismounting the tractor.
- 9. Do not operate while under the influence of drugs or alcohol.
- 10. WARNING: Hydraulic fluid is under high pressure and can penetrate skin, causing injury. Keep hands, face, and body away from pinholes or nozzles that eject hydraulic fluid under high pressure.



1. Cutting/crushing hazard - Stay away from moving parts.



- 1. Wear eye protection, such as goggles or a face shield, when checking or servicing batteries.
- 2. Wear appropriate protective gear, such as rubber gloves and an apron, when checking or servicing batteries.
- 3. Danger: Battery acid is caustic and can cause chemical burns. Keep bystanders a safe distance from the battery.
- 4. Do not expose batteries to arcs, sparks, or open flames. Do not use smoking materials near batteries.
- 5. Explosion hazard batteries produce flammable and explosive gases.



1. Hot surface hazard - Hot surfaces can cause severe burns. Allow engine, exhaust components, and surrounding surfaces to cool before servicing.



- 1. DANGER: Explosion/Fire Hazard
- 2. Keep away from fire, sparks, and pilot lights when refueling or storing tractor and fuel.
- 3. Smoking is prohibited.



Decal	Description	Part Number	Quantity
А	Operator Safety	00-0548	1
В	Warning - Pinch Point	00-0218	6
С	Warning - Battery	00-0366	1
D	Warning - Hot Surface	00-0374	1
E	Danger - Unleaded Gasoline Only	00-0550	1
F	ROPS Certification	00-0611	1



for Tilmor Tractors, Implements, & Accessories



Training Required

- The owner of this machine is solely responsible for properly training the operators.
- The owner/operator is solely responsible for the operation of this machine and prevention of accidents or injuries occurring to him/herself, other people or property.
- Do not allow operation or service by children or untrained personnel. Local regulations may restrict the age of the operator.
- Before operating this machine, read the operator's manual and understand its contents.
- If the operator of the machine cannot understand this manual, then it is the responsibility of this machines owner to fully explain the material within this manual to the operator.
- Learn and understand the use of all controls.
- Know how to stop the power unit and all attachments quickly in the event of an emergency.

Personal Protective Equipment Requirements

It is the responsibility of the owner to be sure that the operators use the proper personal protective equipment while operating the machine. Required personal protective equipment includes, but is not limited to, the following list.



- Wear a certified ear protection device to prevent loss of hearing.
- Wear close fitting clothing and safety equipment appropriate for the job.
- Closed toe shoes must be worn at all times.
- When operating in dusty conditions, it is recommended that a dust mask must be worn.

Operation Safety

- Inspect machine before operation. Repair or replace any damaged, worn or missing parts. Be sure guards and shields are in proper working condition and are secured in place. Make all necessary adjustments before operating the machine.
- Some pictures in this manual may show shields or covers opened or removed in order to clearly illustrate any instructions. Under no circumstance should the machine be operated without these devices in place.
- Alterations or modifications to this machine can reduce safety and could cause damage to the machine. Do not alter safety devices or operate with shields or covers removed.
- Before each use, verify that all controls function properly and inspect all safety devices. Do not operate if the controls or safety devices are not in proper working condition.
- Check parking brake function before operating. Repair or adjust the parking brake if necessary.
- Observe and follow all safety decals.
- All controls are to be operated from the operators station only.
- Always wear a seat belt if the machine has a roll cage/bar installed and in the upright position.
- Ensure the attachment or accessory is locked or fastened securely to the power unit before operating.
- Ensure that all bystanders are clear of the power unit and attachment before operating. Stop the machine if someone enters your work area.
- Always be alert to what is happening around you, but do not lose focus on the task you are performing. Always look in the direction the machine is moving.
- Look behind and down before backing up to be sure of a clear path.
- If you hit an object, stop and inspect the machine. Make all necessary repairs before operating the machine again.

SAFETY



General Safety Procedures

for Tilmor Tractors, Implements, & Accessories



Operation Safety (continued)

- Stop operation immediately at any sign of equipment failure. An unusual noise can be a warning of equipment failure or a sign that maintenance is required. Make all necessary repairs before operating the machine again.
- If equipped with a high/low range feature, never shift between high and low range while on a slope. Always move the machine to level ground and engage the parking brake before shifting range.
- Do not leave the machine unattended while it is running.
- Always park the machine on level ground.
- Always shutoff the engine when connecting a implement or accessory to the power unit.
- Never leave the operator's station without lowering the attachment to the ground, setting the parking brake, shutting off the engine, and removing the ignition key.
- Only operate in well lit conditions.
- Do not operate when there is a risk of lightning.
- Never direct the discharge of any implement or accessory in the direction of people, buildings, animals, vehicles, or other objects if value.
- Never discharge material against a wall or obstruction. Material may ricochet back towards the operator.
- Use extra caution when approaching blind corners, shrubs, trees, or other objects that may obscure vision.
- Do not run the engine in a building without adequate ventilation.
- Do not touch the engine or the muffler while the engine is running or immediately after stopping the engine. These areas may be hot enough to cause a burn.
- Do not change the engine governor settings or over-speed the engine. Operating the engine at excessive speed may increase the hazard or personal injury.
- To reduce the hazard of fire, keep the battery compartment, engine, and muffler areas free of grass, leaves, excessive grease, and other flammable materials.

Preventing Accidents



- Clear working area of objects that might be hit or thrown from machine.
- Keep people and pets out of the working area.
- Know the work area well before operation. Do not operate where traction or stability is questionable.
- Reduce speed when you are operating over rough ground.
- Equipment can cause serious injury and/or death when improperly used. Before operating, know and understand the

operation and safety of the power unit and the attachment being used.

- Do not operate the machine if you are not in good physical and mental health, if you will be distracted by personal devices, or are under the influence of any substance which might impair decision, dexterity, or judgement.
- Children are attracted to machine activity. Be aware of children and do not allow them in the working area. Turn off the machine if a child enters the work area.

Keep Riders Off

- Only allow the operator on the power unit. Keep riders off.
- Never allow riders on any attachment or accessory.









Mounting and Dismounting the Tractor

- To prevent falling accidents always face the machine when mounting or dismounting. Maintain three points of contact with steps and hand holds.
- Never mount or dismount a moving machine.
- Use extra caution when slippery conditions may be present.
- Keep the steps clean and free of grease or oil.
- Never jump when dismounting the tractor.

Use Caution On Slopes, Uneven Terrain, and Rough Ground

- Slopes, uneven terrain, and rough ground can cause loss-of-control and tip-over accidents, which can result in severe injury or death. Operating the tractor on slopes, uneven terrain, and rough ground requires extra caution.
- Avoid sharp up hill turns while on a slope.
- Choose a slow ground speed so you will not have to shift gears or stop on a slope.
- Make sure to move slowly and gradual on
- a slope, do not make any sudden changes in direction or speed.
- Avoid obstructions, ditches, and holes which may cause the tractor to become unstable or tip.
- Stay away from drop-offs, ditches, embankments, and bodies of water.
- Pulling loads on slopes decreases safety. It is the responsibility of the owner/operator to determine loads that can safely be controlled on slopes.
- Not all conditions in which a tractor could overturn are listed. Be aware of situations or conditions that could cause the tractor to become unstable.

Roadway Safety

- Operate with safety lights when operating on or near roadways.
- Obey all state and local laws concerning operation on roadways.
- Slow down and be careful of traffic when operating near or crossing roadways. Stop before crossing roads or sidewalks. Use care when approaching areas or objects that may obscure vision.
- If there is doubt of safety conditions, discontinue machine operation until a time when operation can be performed safely.
- When operating near or on roadways, have a Slow Moving Vehicle Emblem clearly displayed.

Truck or Trailer Transport

- Use care when loading or unloading machine on or into a truck or trailer.
- Use full width ramps for loading the machine on or into a truck or trailer.
- The parking brake is not sufficient to lock the machine during transport. Always secure the power unit and/ or implement to the transporting vehicle securely using straps, chains, cable, or ropes. Both front and rear straps should be directed down and outward from the machine.
- Shut off the fuel supply to the power unit during transport on truck or trailer.
- If equipped, turn the battery disconnect switch to the OFF position and shut off electrical power.





for Ventrac Power Units, Attachments, & Accessories



Towing Loads

- Use caution when towing and stopping heavy loads. Stopping distance increases with speed and weight of towed loads.
- Towed loads with or without brakes that are too heavy for the tractor or are towed too fast can cause loss of control.
- Consider the total weight of equipment being towed.
- Before transporting a towed implement, reference the implement operators manual or look for decals on the implement the provide information on the implements transport speed.
- Never transport an implement at a speed that exceeds the implement's maximum transport speed.
- Ensure that a safety chain(s) are used when towing equipment. A safety chain will aid in controlling towed equipment if the equipment separates from the draw bar or hitch. The safety chain should only have enough slack in the chain to allow for turning.

Maintenance Safety

- Keep all safety decals legible. Remove all grease dirt, and debris from safety decals and instructional labels.
- If any decals are faded, illegible, or missing, replacements can be obtained at www.tilmor.com.
- When new components are installed, be sure that current safety decals are affixed to the replacement components.
- If any component requires replacement, use only original Tilmor replacement parts.
- Always turn the battery disconnect to the OFF position or disconnect the battery before performing any repairs. Disconnect the negative terminal first and the positive terminal last. Reconnect the positive terminal first and the negative terminal last.
- Keep all bolts, nuts, screws, and other fasteners properly tightened.
- Always lower the attachment to the ground, engage parking brake, shut off engine, and remove the ignition key. Make sure all moving parts have come to a complete stop before cleaning, inspection, adjusting or repairing.
- Never perform maintenance on the power unit and/or attachment if someone is in the operator's station.
- Always use protective glasses when handling the battery.
- Check all fuel lines for tightness and wear on a regular basis. Tighten or repair them as needed.
- To reduce the hazard of fire, keep the battery compartment, engine, and muffler areas free of grass, leaves, and grease.
- Do not touch the engine, the muffler, or other exhaust components while the engine is running or immediately after stopping the engine. These areas may be hot enough to cause a burn.
- Allow the engine to cool before storing and do not store near an open flame.
- Do not change the engine governor settings or over-speed the engine. Operating engine at excessive speed may increase the hazard of personal injury.
- Springs may contain stored energy. Use caution when disengaging or removing springs and/or spring loaded components.
- An obstruction or blockage in a drive system or moving/rotating parts may cause a buildup of stored energy. When the obstruction or blockage is removed, the drive system or moving/rotating parts may move suddenly. Do not attempt to remove an obstruction or blockage with your hands. Keep hands, feet and clothing away from all power-driven parts.
- Dispose of all fluids in accordance with local laws.



for Tilmor Tractors, Implements, & Accessories



Fuel Safety

- To avoid personal injury or property damage, use extreme care in handling gasoline. Gasoline is extremely flammable and the vapors are explosive.
- Do not refuel the machine while smoking or at a location near flames or sparks.
- Always refuel the machine outdoors.
- Do not store machine or fuel container indoors where fumes or fuel can reach an open flame, spark, or pilot light.
- Only store fuel in an approved container. Keep out of reach of children.
- Never fill containers inside a vehicle or on a truck or trailer bed with a plastic liner. Always place containers on the ground away from your vehicle before filling.
- Remove the machine from the truck or trailer and refuel it on the ground. If this is not possible, refuel the machine using a portable container, rather than from a fuel dispenser nozzle.
- Never remove the fuel cap or add fuel with the engine running. Allow the engine to cool before refueling.
- Replace all fuel tank and container caps securely.
- Do not overfill fuel tank. Only fill the bottom of the fuel neck, do not fill the fuel neck full. Overfilling of the fuel tank could result in engine flooding, fuel leakage from the tank, and/or damage to the emissions control system.
- If fuel is spilled, do not attempt to start the engine. Move the power unit away from the fuel spill and avoid creating any source of ignition until vapors have dissipated.
- If the fuel tank must be drained, it should be drained outdoors into an approved container.
- Dispose of all fluids in accordance with local laws.
- Check all fuel lines for tightness and wear on a regular basis. Tighten or repair them as needed.
- The fuel system is equipped with a shut-off valve. Shut off the fuel when transporting the machine to and from the job, when parking the machine indoors, or when servicing the fuel system.

Hydraulic Safety

- Make sure all hydraulic connections are tight and all hydraulic hoses and tubes are in good condition. Repair any leaks and replace any damaged or deteriorated hoses or tubes before starting the machine.
- Hydraulic leaks can occur under high pressure. Hydraulic leaks require special care and attention.
- Use a piece of cardboard and a magnifying glass to locate suspected hydraulic leaks.
- Keep body and hands away from pinhole leaks or nozzles that eject high pressure hydraulic fluid. Hydraulic fluid escaping under high pressure can penetrate the skin causing serious injury, leading to severe complications and/or secondary infections if left untreated. If hydraulic fluid is injected into the skin, seek immediate medical attention no matter how minor the injury appears.
- The hydraulic system may contain stored energy. Before performing maintenance or repairs on the hydraulic system, remove attachments, engage the parking brake, disengage weight transfer system (if equipped), shut off the engine, and remove the ignition key.
- Dispose of all fluids in accordance with local laws.

CARDBOARD

SAFETY



520M Tractor Safety Procedures



Roll Over Protective Structure (ROPS)

A WARNING

Keep the ROPS locked in the upright position and the seat belt securely fastened during operation. Failure to do so could result in serious injury or loss of life.

A WARNING

Alterations or modifications to this machine and/ or the ROPS structure can reduce safety and could cause damage to the machine. Do not alter the ROPS. Do not alter any other safety devices.

Your power unit is equipped with a Roll-Over Protective Structure (ROPS). This ROPS was tested and certified in accordance with the following standards.

ROPS: ISO 5700:2013

Seat Belt Anchorage: ISO 3776-2

- ROPS certification applies only when the roll bar is locked in the upright position. Be aware there is no rollover protection when a folding ROPS is in the down position.
- DO NOT remove the ROPS. Alterations to the ROPS structure are not permitted.
- Lower the roll bar only when absolutely necessary and raise the roll bar to the upright position as soon as clearance allows. Never lower a folding ROPS in areas where there are slopes, drop offs, or water.
- Check carefully for overhead clearances (i.e. branches, doorways, electrical wires) before driving under any objects and do not contact them.
- Always wear the seat belt when the roll bar is locked in the upright position. Be certain the seat belt can be released quickly in the event of an emergency.
- Do not wear a seat belt when the roll bar has been lowered to the down position.
- If any part of this ROPS experiences structural damage, the entire ROPS must be replaced.
- Inspect the seat belt for wear or damage before use. Failure to inspect or maintain the seat belt can cause injury or loss of life.



520M Tractor Safety Procedures



Operator Safety Interlock System

The Tilmor 520M Tractor is equipped with a safety interlock system. This system:

- Prevents the engine from starting unless the operator is present in the seat.
- Prevents the engine from starting unless the transmission is in neutral.
- Shuts off the engine if the BPTO is engaged and the operator leaves the seat.

Testing the Safety Interlock System

WARNING

Never operate the power unit if the safety interlock system is malfunctioning. Do not disengage or bypass any switch. Failure to observe this warning could result in injury to yourself and others, or damage to property and equipment.

The daily inspection should be performed prior to the initial startup for the day.

WARNING

Ensure that the parking brake is set during the testing of the safety interlock system. Failure to observe this warning could result in injury to yourself and others, or damage to property and equipment.

Perform the following safety interlock tests daily to test the electrical portion of the interlock system. Before testing, park the tractor on a level surface, set the parking brake, and place the high/low range shift lever in the neutral position. After testing is complete place the high/low shift lever in either high or low range, and set the parking brake.



520M Tractor Safety Procedures



Testing the Safety Interlock System (continued)

Tests 1-4 test the 'Engine Start' function. For each test, ensure that the parking brake is engaged and the high/low range shift lever is in the neutral position. As listed below for each test put the transmission in gear or neutral position, ensure there is or is not an operator present in the seat, and engage or disengage the BPTO if equipped.

ENCINE	Test Number	Transmission in Neutral	Operator Present in Seat	BPTO Engaged if Equipped	Engine Starts
START	1	No	Yes	No	No
	2	Yes	No	No	No
	3	Yes	Yes	Yes	No
	4	Yes	Yes	No	Yes

Tests 5-8 test the 'Engine Run' function. For each test, ensure that the parking brake is engaged, the transmission is in the neutral position, and the high/low range shift lever is in the neutral position. For each test ensure that the engine is running. As listed for each test sit on the seat or raise body weight from the seat, and engage or disengage the BPTO. The engine should continue or stop running as described for each test.

	Test Number	Operator Present in Seat	BPTO Engaged if Equipped	Engine Runs			
RUN	5	Yes	Yes	Yes			
	6	No	Yes	No			
	7	Yes	No	Yes			
	8	No	No	Yes			

Standard Operational Control Locations

Use the following images to help identify the locations of operational controls. The letter next to each control can be referenced to the list that follows these images.





- A. Speedometer
- B. Tachometer
- **C. Ignition Switch**
- D. Choke
- E. Throttle Lever
- F. 2 Speed Transmission High/Low Lever
- G. 4 Speed Transmission Gear Shift Lever
- H. Parking Brake Lever
- I. Front Hydraulic Control Lever
- J. Rear Hydraulic Control Lever
- K. Electrical System Circuit Breaker
- L. Warning Alarm
- M. Depth Control Handle
- N. Steering Wheel
- O. Seat Slide Lever
- P. Seat Latch Lever
- Q. Fuel Shut Off Valve
- R. USB Port
- S. Brake Pedals
- T. Clutch Pedal
- U. Brake Lock Pin

Optional Operational Control Locations

Use the following images to help identify the locations of operational controls. The letter next to each control can be referenced to the list that follows these images.





AA. Hazard Flasher Switch **BB. Front Work Light Switch CC. Implement Light Switch DD. 12 Volt Front Switch EE. Mid Work Light Switch** FF. Rear Work Light Switch GG. 12 Volt Rear Switch HH. Directional Signal Switch II. Horn Switch JJ. Front Auxiliary Hydraulic Control Lever KK. Rear Auxiliary Hydraulic Control Lever LL. Rear Auxiliary Hydraulic Quick Couplers MM. 12 Volt Rear 4 Pin Socket NN. 12 Volt 7 pin Socket OO. 12 Volt Front 4 pin Socket PP. Front Auxiliary Hydraulic Quick Couplers **QQ. BPTO Control Handle**

Optional Operational Control Locations

Use the following images to help identify the locations of operational controls. The letter next to each control can be referenced to the list that follows these images.





- **RR. Seat Slide Lever**
- SS. Lumbar Support Knob
- TT. Seat Back Angle Adjustment Lever
- UU. Weight Adjustment Lever
- VV. Height Adjustable Backrest
- WW. Implement Hoist Hook
- XX. Hoist Retaining Pin
- YY. Winch Handle
- ZZ. Winch Handle Storage

Speedometer Cluster Gauge (A)



The speedometer gauge contains a speedometer, BPTO indicator light, glow plug indicator light, and parking brake indicator light.

- 1. Belt power take off (BPTO) indicator light activates when the BPTO is engaged.
- 2. Speedometer displays the speed of the tractor. The speedometer can be set to display either miles per hour (MPH) or kilometers per hour (KPH).
- 3. Glow plug indicator light indicates the activation of the glow plugs for pre-heating the engine (diesel engine only). The glow plugs activate when the key is turned to the on position. When the glow plug light turns off, the engine is ready to start.
- 4. Parking brake indicator light activates when the parking brake is set.

Tachometer Gauge Cluster (B)



The tachometer gauge contains a water high temperature indicator light, tachometer, low voltage indicator light, and a low oil pressure indicator light.

- 1. Water high temperature warning indicator light activates when the temperature of the engine cooling system has reached an unsafe level. If this light comes on during operation, park the power unit, turn the PTO off, reduce the engine speed to low idle, and allow the engine to cool. Check the radiator screen and clean if necessary. If the engine temperature continues to rise, shut off the engine. If the engine continually overheats, refer to the troubleshooting section for possible problems.
- **2. Tachometer** displays the engine speed in RPM. Also displays engine hours.
- 3. Low voltage indicator light activates when the voltage drops to an unacceptable level. If this light comes on, shut off any unnecessary lights and accessories to reduce the current draw. If voltage continues to drop, park the power unit, shut off the engine, and turn the ignition key to the off position. Refer to the troubleshooting section for possible problems.
- 4. Low oil pressure indicator light activates when the engine oil pressure is below a safe level. The light comes on when the ignition key is switched to the on position and stays illuminated until the engine is started and safe oil pressure develops. If this light comes on during operation, immediately shut off the engine. Do not restart the engine until the problem has been located and corrected.

Ignition Switch (C)



- 1. Off or Stop Position all 12 volt power going through the key switch is off
- 2. On or Run position engine run position, 12 volt power is sent to accessories.
- 3. Start Position when the key is turned to the start position the starter will be engaged.

Throttle Lever (D)

- 1. Fast
- 2. Slow

Moving the throttle lever forward toward the fast position increases the engine Revolutions Per Minute (RPM). Moving the throttle lever backward toward the slow position decreases the engine RPM.

2 Speed Transmission High/Low Range Shift Lever (E)

- 1. High range
- 2. Neutral
- 3. Low range

With the tractor parked on level ground, 4 speed transmission in neutral, and brakes applied, High or Low gear can be selected. Move the shifter to the middle of the shift stroke to place the transmission in neutral. Move the shifter forward and down to select low range. Move the shifter upward and back to select high range. lever in different combinations provides eight forward speeds 2 4

4 Speed Transmission Gear Shift Lever (F)

Parking Brake (G)

1. Parking brake engaged

Provides four forward travel speeds and one reverse

speed. Using the 4 speed gear shift lever and the 2 speed high/low range shift

2. Parking brake disengaged When parking the power unit, always engage the parking brake to prevent accidental movement of the machine. To engage the parking brake, pull the handle upward and back toward the operator.



3

To disengage the parking brake, push the handle forward and down.

Front Hydraulic Control Lever (H)

- 1. Lower
- 2. Hold
- 3. Lift

Moving the front hydraulic control lever forward lowers the front hitch points. Moving the front hydraulic control lever to the rear raises the hitch points.



Rear Hydraulic Control Lever (I)

- 1. Lower
- 2. Hold
- 3. Lift

Moving the rear hydraulic control lever forward lowers the front hitch points. Moving the rear hydraulic control lever to the rear raises the hitch points.







 $\mathbf{1}$

Choke (J)

The choke is used when starting the engine in cool temperatures. The choke restricts the flow of air to enrich the fuel-air mixtures when starting the engine.

Electrical System Circuit Breaker (K)

The circuit breaker/ battery disconnect switch controls power to the entire electrical system. Pushing the button trips the circuit breaker disabling the electrical system,



allowing electrical components to be serviced. Moving the switch upwards engages the circuit breaker, energizing the electrical system.

Warning Alarm (L)

The warning alarm works with the tachometer gauge to alert the operator to problems. The warning alarm sounds a continuous signal whenever a warning is displayed on the tachometer gauge. If the warning alarm sounds, immediately check the tachometer gauge to determine the cause of the warning and then take appropriate action.

Depth Control Handle (M)

- 1. Highest Position
- 2. Lowest Position

The depth control handle allows the implement to be incrementally raised

implement to be $10\sqrt{1}$ incrementally raised or lowered by 5/16". Moving the depth control handle forward lowers the implement. Moving the depth

dle forward lowers the implement. Moving the depth control handle rearward raises the implement.

Steering Wheel (N)

Turn the steering wheel to the left (counterclockwise) to turn the tractor to the left. Turn the wheel to the right (clockwise) to turn the tractor to the right.

Seat Slide Lever (O)

Lift the seat slide lever to release the seat lock. Move the seat forward or backward to the desired position and release the seat slide lever to lock the seat in place.

Seat Latch Lever (P)

The seat latch lever secures the seat in place during operation. To release the seat pull the seat release

handle forward the while pulling the seat back forward.

Fuel Shut-off Valve (Q)

- 1. Fuel On
- 2. Fuel Off

The fuel shut-off valve controls the flow of fuel to the engine. Turning the valve counterclockwise to the stop allows fuel to flow to the engine. Turning the valve clockwise to the stop shuts



off the flow of fuel to prevent fuel leakage when changing fuel filters or servicing the fuel system. Turn off the fuel shut-off valve when transporting the tractor on a truck or trailer and when parking the tractor indoors.

USB Port (R)

Allows the operator to charge a personal device such as a mobile phone during operation.

Brake Pedals (S)



Use caution when using the brake pedals independently. Using the brakes independently at a higher rate of speed could lead to accidental turning or tipping of the tractor.

The brake pedals are used together to stop the tractor. The Tilmor tractor is equipped with independent brake pedals for the left and right rear wheels. Using the pedals independently can allow the tractor to make tighter turns. The brake pedals must be locked together with the brake lock pin when the tractor is being operated at higher speeds.

Clutch Pedal (T)

The clutch pedal controls the engagement or disengagement of the clutch providing power from the engine to the drivetrain. Pushing the clutch pedal in disengages the clutch. Letting the clutch pedal out engages the clutch providing power to the drivetrain.

Brake Lock Pin (U)

The brake lock pin locks the brake pedals together. With the pin lock engaged the brakes should stop the tractor in a straight line. Disengaging the pin will allow the brake pedals to work independently. Using the pedals independently can allow the tractor to make tighter turns. The brake pedals must be locked together when the tractor is being operated at higher speeds.

Hazard Flasher Switch (AA)

- 1. On
- 2. Off

Depressing the top portion of the hazard switch flashes both directional turn signal lights. Depressing the bottom portion of the switch turns the hazard flashers off. Use of the directional turn signals will override the hazard

flashers until the turn signals are turned off.

Head Light Switch (BB)

- 1. On
- 2. Off

Depressing the top portion of the headlight switch turns on the headlights and tail lights. Depressing the bottom portion of the switch turns the lights off.

Implement Light Switch (CC)

Depressing the top portion of the

implement light switch turns on the

implement work lights. Depressing the

- 1. On
- 2. Off



Front Work Light Switch (EE)

- 1. On
- 2. Off

Depressing the top portion of the front work light switch turns on the front work lights. Depressing the bottom portion of the switch turns the front work lights off.

Rear Work Light Switch (FF)

- 1. On
- 2. Off

Depressing the top portion of the rear light switch turns on the rear work lights. Depressing the bottom portion of the switch turns the rear work lights off.



12 Volt Rear Switch (GG) and 4 Pin Socket (MM)

- 1. On
- 2. Off

The rear 4-pin socket provides electrical power to rear mounted implements that are equipped with electrical controls. The switch turns off and on the electrical 4-pin socket. Depressing the top portion of the



switch turns on electrical power to the front 4-pin socket. Depressing the bottom portion of the switch turns off electrical power.

Directional Signal Switch (HH)

- 1. Left Signal On
- 2. No Signal On

3. Right Signal On Depressing the left portion of the directional signal switch turns on the left turn signal. Depressing the right portion of



the directional signal switch turns on the right turn signal. Return the switch to the middle position to turn off the signals. The left and right turn signals will override the hazard flashers.



- 1. On
- 2. Off

The front 4-pin socket provides electrical power to implements that are equipped with electrical controls. The switch turns off and on the electrical power to the front 4-pin socket. Depressing the top portion of the



2

switch turns on electrical power to the 4-pin socket. Depressing the bottom portion of the switch turns off electrical power.





Horn Switch (II)

Depressing the horn switch to sound the signal horn. The horn will sound until the horn switch is released.

Front Auxiliary Hydraulic Control Lever (JJ)

- 1. Aux Hydraulic Couplers Direction #1
- 2. Aux Hydraulic Couplers Hold

3. Aux Hydraulic Couplers Direction #2

Moving the front hydraulic control lever forward or backward controls the auxiliary functions of mid mounted implements.



The flow rate of implements connected to the auxiliary hydraulic should not exceed....

Rear Auxiliary Hydraulic Control Lever (KK)

- 1. Aux Hydraulic Couplers Direction #1
- 2. Aux Hydraulic Couplers Hold



Moving the rear hydraulic control lever forward or backward controls the auxiliary functions of rear mounted implements.



The flow rate of implements connected to the auxiliary hydraulic should not exceed....

Rear Auxiliary Quick Couplers (LL)

The rear auxiliary quick couplers are used to control auxiliary functions of rear mounted implements.

12 Volt 7 Pin Socket (NN)

The 12 volt 7-pin socket is used to provide power to a trailer for lighting.

Front Auxiliary Quick Couplers (PP)

The front auxiliary quick couplers are used to control auxiliary functions of mid mounted implements.

BPTO Control Handle (QQ)

- 1. Engaged
- 2. Disengaged

The Belt driven Power Take Off provides power to belt driven implements mounted on the mid mount of the Tilmor tractor. Lift the BPTO handle upwards to engage the BPTO. Lower the BPTO handle to disengage the BPTO.



Seat Slide Lever (RR)

Lift the seat slide lever to release the seat lock. Move the seat forward or backward to the desired position and release the seat slide lever to lock the seat in place.

Lumbar Support Knob (SS)

The lumbar support knob adjusts the curvature of the backrest in either the upper or lower part of the backrest. Position 0 provides minimal support. Position 1 provides maximum curvature in the upper part of the backrest. Position 2 provides maximum curvature in the lower part of the backrest.

Seat Back Angle Adjustment Lever (TT)

Lift up on the backrest angle lever to release the backrest catch. Move the backrest to the desired position and release the backrest angle lever to lock the backrest in place.

Weight Adjustment Lever (UU)

The weight setting must be adjusted with the operator sitting on the seat. The weight setting should be checked and adjusted as necessary each time the power unit is operated. Fold the weight adjustment lever out and move it up or down to adjust the weight setting. The weight setting is correct when the arrow is in the middle of the viewing window. After adjusting the weight setting, fold the adjustment lever completely into the locking position.

Height Adjustable Backrest (VV)

Allows the height of the backrest to be adjusted by moving the backrest up or down.

Implement Hoist Hook (WW)

The implement hoist hook is used to connect the implement hoist cable to the lift bar of an implement.

Hoist Retaining Pin (XX)

The retaining pin secures the implement hoist in place on the tractor. The retaining pin should be installed at all times.

Winch Handle (YY)

The winch handle is used to operate the hoist. Cranking the handle clockwise retracts the cable (lifts the implement). Cranking the handle counterclockwise extends the cable (lowers the implement).

Winch Handle Storage (ZZ)

When the handle is not in use the handle can be placed securely in this location.

Daily Inspection

WARNING

Always set the parking brake, shut off the tractor's engine, remove the ignition key, and ensure all moving parts have come to a complete stop before inspecting components, or attempting any repair or adjustment.

- 1. Park the tractor on a level surface, with the engine off and all fluids cold.
- 2. Perform a visual inspection of the tractor. Look for loose or missing hardware, damaged components, or signs of wear.
- 3. Inspect the ROPS structure and seat belt for damage or signs of wear.
- 4. Inspect the battery, electrical connections, and lights.
- 5. Ensure the parking brake tension is properly adjusted.
- 6. Inspect the hydraulic hoses, hydraulic fittings, and fuel lines to ensure tight, leak free connections.
- 7. Inspect all belts for damage or excessive wear. Replace the belts as required.
- 8. Check the tractors engine oil level, hydraulic oil level, coolant level, and fuel level. Add fluid or service as required.
- 9. Ensure the radiator screen (if equipped), air cleaner, and engine compartment are clean.
- 10. Check the tires for proper inflation.
- 11. Test the operator safety interlock system. The test is available in the Testing the Operator Safety Interlock section of this manual.

Starting The Engine

A CAUTION

Do not use ether or starting fluids. Use of starting fluids in the air intake system may be potentially explosive or cause a runaway engine condition. Use of starting fluids could result in engine damage and/or personal injury.

The Tilmor 520 tractor is equipped with an interlock system for operator safety. The safety interlock system requires the tractor transmission to be in the neutral position, and an operator to be seated on the tractor.

- 1. Turn the fuel shut-off valve to the on position.
- 2. Turn the battery disconnect switch to the on position.
- 3. Disengage the BPTO if equipped.
- 4. Lower the any mid or rear mounted implements to the ground.
- 5. Place the transmission is in the neutral position.
- 6. Move the throttle lever to the fast position.
- 7. Engage the choke as required.

Do not run the electric starter continuously for more than 10 seconds. If the engine does not start right away, wait 30 seconds and try again.

- 8. Turn the ignition key to the start position and hold to engage the starter. Release the key when the engine starts. NOTE: If the engine fails to start, refer to the troubleshooting section.
- 9. Disengage the choke.

Idling The Engine

- 1. Adjust the throttle to set the engine speed at slow idle.
- 2. Set the parking brake.
- 3. Place the transmission in neutral.

Starting A Stalled Engine

- 1. Disengage the BPTO if equipped.
- 2. Move the transmission to the neutral position.
- 3. Start the engine.

Shutting Off The Engine

- 1. Park the tractor on a level surface and set the parking brake.
- 2. Move the throttle lever to the slow idle position.
- 3. Allow the engine to idle for 3-5 minutes.
- 4. Turn the ignition key to the off position.
- 5. If parking the tractor for an extended period of time, press the battery circuit breaker button to disconnect battery power and turn the fuel shut-off valve to the off position.

Driving The Tractor

A CAUTION

The tractor must be at a complete stop before shifting the two speed transmission. Failure to stop the tractor before shifting between high and low range can result in damage to equipment.

- 1. Start the engine.
- 2. Place the two speed transmission in High or Low range as required.
- 3. Disengage the parking brake.
- 4. Depress the clutch pedal.
- 5. Adjust the throttle as required.
- 6. Move the transmission gear shift lever to the desired gear. Using the gear shift lever and high low range shift lever in different combinations, eight forward speeds and two reverse speeds can be selected.

A CAUTION

Ensure that the clutch pedal is depressed when shifting the gear lever. Failure to depress the clutch when shifting gears can result in damage to equipment.

- 7. Release the clutch pedal gradually to begin movement.
- 8. Adjust the throttle as required to maintain a constant operating speed.

Stopping The Tractor

- 1. Park the tractor on a level surface.
- 2. Disengage the BPTO if equipped.
- 3. Depress the clutch.
- 4. Depress both brake pedals evenly.
- 5. Apply the parking brake.
- 6. Place the transmission in the neutral gear position.
- 7. Move the throttle lever to the slow idle position.
- 8. Allow the engine to idle for 3-5 minutes.
- 9. Turn the ignition key to the off position.
- 10. If parking the tractor for an extended period of time, press the battery circuit breaker button to disconnect battery power and turn the fuel shutoff valve to the off position.

Emergency Stopping The Tractor

- 1. Depress the clutch
- 2. Depress both brake pedals evenly.
- 3. Turn the ignition key to the off position.
- 4. Set the parking brake.
- 5. Do not leave the operators station before all moving parts have stopped moving.

Mid Mount Hitch

The mid mount hitch has a maximum load capacity of 450 lbs (204 kg). The hitch is used to secure implements to the tractor, and to be able to raise and lower the implements. The mid mount hitch is controlled by the front hydraulic control lever and the depth control handle. Set the desired depth using the depth control handle. Using the front hydraulic control lever adjust the hitch arms so that the depth control handle chain is taught.

Mid Mount Hitch Attaching

- 1. Insure that the hitch arm latches are locked open.
- 2. Lower the hitch arms to the lowest position.
- 3. Align the implement or tool bar mounting locations with the hitch arms.
- 4. Raise the hitch arms until the implement lift pins are fully seated in the hitch arm mounting location.
- 5. Close the hitch arm latches ensuring the implement or tool bar is securely locked in place.

Depth Control Lever

The depth control handle allows the implement to be incrementally raised or lowered by 5/16". Moving the depth control handle forward lowers the implement. Moving the depth control handle rearward raises the implement. The depth control handle setting prevents the implement from being lowered any further by the mid mount hitch hydraulic control.

Rear Hitch

The rear mount hitch has a maximum load capacity of 500 lbs (226 kg). The hitch is used to secure implements to the tractor, and to be able to raise and lower the implements. The rear mount hitch is controlled by the rear hydraulic control lever.

Rear Hitch Attaching

- 1. Insure that the hitch arm latches are locked open.
- 2. Lower the hitch arms to the lowest position.
- 3. Align the implement or tool bar mounting locations with the hitch arms.
- 4. Raise the hitch arms until the implement lift pins are fully seated in the hitch arm mounting location.

5. Close the hitch arm latches ensuring the implement or tool bar is securely locked in place.

Implement Hoist

The implement hoist aids in positioning an implement or attachment to be mounted on the mid mount of the Tilmor tractor.

WARNING

Avoid crushing and related injuries. Do not work on, under or around a loaded hoist. Immediately transfer and secure the implement or tool to the tractor. Keep all hands, feet, and other body parts out from under the raised implement or tool until it has been secured to the tractor or placed on the ground.

A CAUTION

The maximum lift capacity of the hoist is 450 lbs (226 kg). Do not exceed the maximum weight limit of the hoist. Exceeding the limit could result in injury or damage to equipment.

If using an electric drill, do not connect the drill chuck directly to the winch shaft. Attach the drill with 5/8" socket on the hex shaft. To minimize heat build up and possible winch damage, do not exceed 600 RPM.

Belt Drive PTO (BPTO)

The belt driven power take off provides power to belt driven implements mounted on the mid mount of the Tilmor tractor. Lift the BPTO handle upwards to engage the BPTO. Lower the BPTO handle to disengage the BPTO. The BPTO is integrated into the safety interlock system. If the BPTO is engaged the engine will not start. If the Operator is not present in the operators seat and the BPTO is engaged the engine will shut off.

Tractor Track Width Adjustment

The track width of the Tilmor 520 series tractor is adjustable from 50" on center to 78" on center in 2" increments.

The following steps will explain how to adjust the track width of the tractors front axle.

Lift the front of the tractor so that the front wheels are approximately 2" off of the ground using a hoist or high lift jack.

- 1. Park the tractor on a level surface.
- 2. Engage the parking brake and shut off the engine.
- 3. Remove the key from the ignition switch.

WARNING

Ensure that the tractor is securely supported when the wheels are lifted off of the ground. Failure to secure the tractor properly can result in personal injury or death.

- 4. Using a high lift jack, hoist, or other safe method lift the front of the tractor off of the ground
- 5. Remove the 1/2" bolt (A) and nut (B) from the tie rod link.



6. Remove the three 5/8" bolts (C) and nuts securing the axle in place.



Attention

All three bolts must be installed in the axle, Two bolts must be installed at the widest location.

7. Adjust the axle in or out to the desired width.

GENERAL OPERATION



- 8. Install the three mounting bolts to secure the axle in place.
- 9. Torque the three 5/8" bolts to 151 ft-lbs (205 Nm).

Attention

Ensure that the wheel is aligned straight forward.

- 10. Install the 1/2" bolt and nut through the tie rod link.
- 11. Torque the bolt to 75 ft-lbs (102 Nm).
- 12. Adjust the other side of the front axle in the same manner as required.

The following steps will explain how to adjust the track width of the tractor's rear axle. Each wheel has multiple adjustments within the wheel and dish.

- 1. Park the tractor on a level surface.
- 2. Engage the parking brake and shut off the engine.
- 3. Remove the key from the ignition switch.

WARNING

Ensure that the tractor is securely supported when the wheels are lifted off of the ground. Failure to secure the tractor properly can result in personal injury or death.

- 4. Using a jack and jack stands lift the rear of the tractor, raising the rear wheel approximately 2 inches off of the ground.
- 5. Remove the wheel from the tractor.
- 6. Reference the chart below to reach the desired track width for your Tilmor tractor.

Wheel Offset	Track Width	Rim Orientation*	Dish Orienta- tion**	Rim Flange Mounting Sur- face***
-3	50"	OUT	IN	OUT
-1	54"	Ουτ	IN	IN
1	58"	IN	IN	OUT
3	62"	IN	IN	IN
5	66"	OUT	Ουτ	OUT
7	70"	OUT	Ουτ	IN
9	74"	IN	Ουτ	OUT
11	78"	IN	OUT	IN

* RIM ORIENTATION IS BASED ON THE LOCATION OF THE VALVE STEM. IF THE VALVE STEM IS ORIENTED AWAY FROM THE TRACTOR THE RIM ORIENTATION IS OUT. IF THE VALVE STEM IS ORIENTED TOWARD THE TRACTOR THE RIM ORIENTATION IS IN.

** DISH ORIENTATION IS BASED ON THE SIDE OF THE DISH MOUNTED TO THE HUB. IF THE DISH IS MOUNTED TO THE HUB INSIDE THE CONCAVE PORTION OF THE DISH THE DISH IS IN. IF THE DISH IS MOUNTED TO THE HUB WITH THE CONCAVE PORTION AWAY FROM THE HUB THE DISH IS OUT.

***RIM FLANGE MOUNTING SURFACE IS BASED ON THE SIDE OF THE FLANGE TO WHICH THE DISH IS BOLTED. IF THE DISH IS MOUNTED TO THE FACE OF THE FLANGE ORIENTED INSIDE TOWARD THE TRACTOR THE FLANGE MOUNTING SURFACE IS IN. IF THE DISH IS MOUNTED TO THE FACE OF THE FLANGE ORIENTED OUTWARD AWAY FROM THE TRACTOR THE FLANGE MOUNTING SURFACE IS OUT.

Ballast

Adding ballast to the front or rear of the tractor can greatly impact the performance and productivity of the tractor.

Add weights to the front or rear of the tractor as needed (not to exceed hitch or axle load capacities) to improve traction and give the tractor more stability.

Load Capacities									
Front Axle	980 lbs (444 kg)								
Rear Axle	3,200 lbs (1451 kg)								
Mid Mount Hitch	450 lbs (204 kg)								
Rear Hitch	500 lbs (226 kg)								
Maximum Tractor Weight	4000 lbs (1814 kg)								

Operating use and implements being used will determine the ballast location and the amount of ballast required.

- Ensure that enough ballast is used on the front of the tractor to ensure sufficient weight for steering.
- When changing implements it may be necessary to change ballast locations and amount of ballast.
- Remove ballast when it is no longer needed.

Driving the Tractor on Roads

Before operating the tractor on a public road or highway, ensure that the tractor is equipped with working headlights, tail lights, turn signals, and flashing warning lights. Reference local regulations regarding equipment lighting and marking requirements.

- Ensure that lighting is clean and unobstructed.
- Repair or replace any damaged lighting and markings.

A CAUTION

The Tilmor 520 series tractor is designed for off road use only. The tractor can be equipped with a road package (AT-9077). The road package consists of emergency lights, tail lights, headlights, horn, and a slow moving vehicle sign.

1. Turn on the tractor headlights. Ensure that the headlights are adjusted properly and tail lights are illuminated.

- 2. Use turn signals when turning. Ensure the turn signal switch is returned to the center position after turning is complete.
- Ensure that the brake pedals are locked together before operating the tractor on a road.
- 4. Maintain control of the tractor at all times. Slow down when encountering hills, turns, and rough ground.
- 5. Shift to a lower gear when going down hill to control the speed of the tractor without using the brakes. Never allow the tractor to coast downhill.
- 6. Use caution when transporting rear mounted equipment.
- 7. Ensure rear mounted equipment has lighting and markings in accordance with local regulations.
- 8. Ensure the tractor has proper ballasting before operating on a public road or highway.

Towing

The Tilmor 520 series tractor is capable of towing loads up to 2000 lbs (907 kg). The receiver style hitch has a maximum static vertical load capacity of 500 lbs.

When towing loads it is important to ensure that:

- 1. The receiver hitch pin is secure.
- 2. Safety chains shall be used.
- 3. Inspect towed equipment to ensure it is in proper working order.
- 4. Ensure that towed equipment has proper lighting and markings in accordance with local regulations.
- 5. Stopping distances are increased.
- 6. Maintain control of the tractor at all times. Slow down when encountering hills, turns, and rough ground.
- Shift to a lower gear when going down hill to control the speed of the tractor without using the brakes. Never allow the tractor to coast downhill.
- 8. Use caution when towing loads over adverse surface conditions.

A WARNING

Always set the parking brake, shut off the tractor's engine, remove the ignition key, and ensure all moving parts have come to a complete stop before inspecting components, or attempting any repair or adjustment.

Service And General Maintenance

Proper and timely service of this tractor is critical to keep the tractor in a safe and reliable operating condition. Follow the maintenance schedule at the end of this section.

Attention

If any component requires replacement, use only original Tilmor replacement parts.

If any component of the 520 series tractor requires replacement, use only original Tilmor replacement parts. Tilmor replacement parts are available on our website at www.tilmor.com or reach a customer service representative at 1-844-255-5864.

Cleaning And Appearance Care

For best results, and to maintain the finish of the power unit, clean or wash the power unit to remove accumulated dirt and debris when the job is finished.

A CAUTION

If the engine has been running, it must be allowed to cool in order to prevent damage to the block and exhaust manifold.

Do not direct high pressure water at the engine, air cleaner, muffler, radiator, or any electrical components.

Allow the tractor and all components to cool before washing. Refer to the specific service sections for proper cleaning techniques for the engine, and radiator. Use mild soap and water to clean the tractor. Harsh chemical cleaners could cause damage to the finish or components.

After cleaning, use touch-up paint to repair any scrapes.

Service Access Points

Throughout the service section, different access points are referred to. The following list and images identify shields and covers that may need to be removed or opened during service.

1. Rear Engine Access Cover (A).



2. Engine Access Cover (B).



3. Battery Cover (C).



4. Seat (D).



5. Fuse Block Access Cover (E).



6. Fuel Shut Off Valve Access Cover (F).



7. Brake Master Cylinder Access Panel (G).



Lubrication Locations

Lubrication is required at the following locations. Refer to the maintenance schedule for service intervals and amount of grease.

Refer to the Specification section for grease type.

1. Outer Tie Rods



2. Inner Tie Rods



3. Front Axle Pivot Tube Left and Right



4. Front Wheel Hubs



5. Front Hitch Cylinder



6. Rear Hitch Cylinder



7. Transmission



Checking Hydraulic Fluid Level

Check the hydraulic fluid level when the hydraulic system is cold, prior to operating the tractor. If the hydraulic system is warm, allow one hour for the hydraulic system to cool before checking the fluid level. Checking the fluid level when the hydraulic system is warm will produce an inaccurate fluid level reading.



Λ

Attention

After connecting a new implement or kit that runs off the tractors hydraulic system, run the implement through a complete cycle, then stop and check the hydraulic Fluid level.

- 1. Park the tractor on a level surface.
- 2. Fully raise the front hitch and raise the rear hitch.
- 3. Engage the parking brake and shut off the engine.
- 4. Remove the key from the ignition switch and allow the hydraulic system time to cool.
- The hydraulic fluid tank (A) is mounted to the right of the operators seat. Check the oil level in the reservoir. The fluid level should be within the proper range indicated by the fluid level decal (B) mounted on the operator console to the left of the hydraulic fluid tank.



Attention

The recommended hydraulic fluid is Mobifluid 424. See the Specification section of this manual for more information.

6. If the hydraulic fluid level is below the low mark on the decal, add hydraulic fluid to the reservoir until the proper level is reached.

Checking Engine Oil Level



Attention

Avoid Engine Damage!

Failure to check the oil level regularly could lead to serious damage to your engine, if the engine is run with and incorrect oil level.

- Check the engine oil level with the power unit sitting on a level surface and with the engine shut off and the oil cold.
- Keep the oil level between the **FULL** and **ADD** marks.
- Do not add oil with the engine running.
- 1. Park the tractor on a level surface.
- 2. Engage the parking brake and shut off the engine.
- 3. Remove the key from the ignition switch and allow the engine and oil to cool.
- 4. Fold the operators seat forward.
- 5. Open the engine access panel (A).



6. Remove the oil dipstick (B) from the engine and wipe with a clean cloth.



- 7. Insert the dipstick back into the engine and remove again.
- 8. Check the oil level. The level should be between the Full (C) and Add (D) marks on the dipstick.



Attention

The recommended engine oil is Mobil Delvac Extreme 10W-30. See the Specification section of this manual for more information.

9. Remove the oil fill cap (E) and add small amounts of engine oil to bring the oil level no higher than the full level on the dipstick.



- 10. If the oil level is above the full level, drain some engine oil to achieve the proper level on the dipstick.
- 11. Close the engine access door securely.

Changing Air Filter Elements

A CAUTION

When the air filter elements are removed, an opening is created to the internal parts of the engine.

Be sure nothing falls into the canister that could make its way into the engine. Have the new filter elements ready to install immediately after removing the old filter elements.



Attention

Avoid damage to your engine!

Improper service to the engine air filter can result in severe engine damage.

- Inspect the filter daily in extreme heat, dust, or other severe conditions.
- Never run the engine without a proper air filter installed.
- Never wash or clean the paper filter element.
- 1. Park the tractor on a level surface.
- 2. Engage the parking brake and shut off the engine.
- 3. Remove the key from the ignition switch and allow the engine to cool.
- 4. Open the rear engine access panel (A).



5. Locate the engine air cleaner assembly (B).



6. Release both latches (C) on the filter assembly and unhook the latches from the filter housing.



- 7. Remove the filter cap (D).
- 8. Remove and discard the air filter element (E).



- 9. Install the new air filter element(s).
- 10. Install the filler cap and securely fasten both latches.

Filling The Fuel Tank

A DANGER

Fuel is flammable and/or explosive. Follow all safety instructions in the Fuel Safety section of this manual and in the engine operators manual.

A WARNING

Long term exposure to fuel vapors can cause serious injury or illness. Avoid prolonged breathing of fuel vapors. If fuel is spilled on skin or clothing, change clothing and wash affected skin immediately.

A CAUTION

Avoid damage to your engine!

Only use fuel that meets the specifications required for your engine. Refer to the engine operator's manual for the proper grade and specifications of fuel for your engine.

- 1. Park the tractor on a level surface.
- 2. Engage the parking brake and shut off the engine.
- 3. Remove the key from the ignition switch and allow the engine to cool.
- 4. The fuel tank cap is located on the left rear fender. Wipe any dust and dirt off the fuel cap to prevent dirt from falling into the fuel tank, and remove the fuel cap.

A CAUTION

If the tractor will not be used after filling the fuel tank, only fill the fuel tank to within 1" (25 mm) of the bottom of the fuel neck to allow room for fuel expansion from temperature changes. Failure to do so may cause engine flooding, fuel leakage from the tank, and/or damage to the emissions control system.

- 5. Add fuel to the tank until the fuel reaches the bottom of the fuel neck. Do not overfill by filling the fuel neck, as this may cause engine flooding, fuel leakage from the tank, and/or damage to the emissions control system. Keep the fuel nozzle in contact with the rim of the fuel neck until fueling is complete. Replace the fuel cap and tighten.
- 6. Wipe up any fuel spills and allow fuel vapors to dissipate before starting the engine.

Checking the Brake Fluid

- 1. Park the tractor on a level surface.
- 2. Engage the parking brake and shut off the engine.
- 3. Remove the key from the ignition switch.
- 4. Press the button on the electrical system circuit breaker to disconnect battery power.
- 5. Remove the brake master cylinder access panel by removing the four 1/4" bolts.
- 6. To access the reservoir move the metal retaining bar (A) to the right as shown below.



- 7. Lift the reservoir cap from the reservoir.
- 8. The fluid level should 1/4" to 1/2" from the top of the reservoir.



- 9. Add brake fluid as required. The brake fluid type can be found in the specifications section of this manual.
- 10. Fold the cap diaphragm into itself and reinstall the cap securing it in place with the metal retaining bar.
- 11. Repeat the process for the other reservoir.

Checking the Transmission Fluid

- 1. Park the tractor on a level surface.
- 2. Engage the parking brake and shut off the engine.
- 3. Remove the key from the ignition switch.
- 4. Press the button on the electrical system circuit breaker to disconnect battery power.
- 5. Tilt the operators seat forward.
- 6. Locate the transmission fill plug (A) located on the front side of the transmission.



- 7. Remove the fill plug and crush washer.
- 8. The transmission fluid should reach the bottom of the service port hole.
- 9. Add transmission fluid as required. Transmission fluid type can be found in the specifications section of this manual.

Do not over tighten the fill plug. Over tightening the fill plug could damage the transmission.

10. Install the fill plug and aluminum crush washer.

Checking Drive Belts

A WARNING

Avoid Personal Injury!

Fingers or loose clothing can get caught in rotating parts. Shut off the power unit engine, remove the ignition key, and wait for all moving parts to stop rotating before working on the tractor.

- 1. Park the tractor on a level surface.
- 2. Engage the parking brake and shut off the engine.
- 3. Remove the key from the ignition switch and allow the engine to cool.
- 4. Press the button on the electrical system circuit breaker to disconnect the battery power.
- 5. Open the engine access door.
- 6. Check the drive belts for excessive wear, cracks, or damage. Replace if necessary.



Separation

 Check the drive belt tension, if the tension is incorrect adjust the drive belt tension. A deflection of 5/16" to 3/8" (8 to 10 mm) under a load of 13.6 lbs (6.2 kgf) pressed in the middle of the span. If the belt tension is not within 5/16" to 3/8" (8 to 10mm) adjustment is required.

Adjusting The Drive Belts Tension

A WARNING

Avoid Personal Injury!

Fingers or loose clothing can get caught in rotating parts. Shut off the power unit engine, remove the ignition key, and wait for all moving parts to stop rotating before working on the tractor.

- 1. Park the tractor on a level surface.
- 2. Engage the parking brake and shut off the engine.
- 1. Remove the key from the ignition switch and allow the engine to cool.
- 2. Press the button on the electrical system circuit breaker to disconnect the battery power.
- 3. Open the engine access door.
- 4. Locate the drive belt tension pulley (A).



- 5. Loosen the tension pulley by loosening the 1/2" locknut (B).
- 6. Use a long pry bar (C) to put downward pressure on the tension pulley.



- 7. When the pulley is at the desired tension tighten the 1/2" lock nut.
- Check the drive belt tension, if the tension is incorrect adjust the drive belt tension. A deflection of 5/16" to 3/8" (8 to 10 mm) under a load of 13.6 lbs (6.2 kgf) pressed in the middle of the span. If the belt tension is not within 5/16" to 3/8" (8 to 10mm) adjustment is required.

9. Checking The Hydraulic Pump Belt

A WARNING

Avoid Personal Injury!

Fingers or loose clothing can get caught in rotating parts. Shut off the power unit engine, remove the ignition key, and wait for all moving parts to stop rotating before working on the tractor.

- 1. Park the tractor on a level surface.
- 2. Engage the parking brake and shut off the engine.
- 3. Remove the key from the ignition switch and allow the engine to cool.
- 4. Press the button on the electrical system circuit breaker to disconnect the battery power.
- 5. Remove the transmission and belt cover located to the left of the operators seat.
- 6. Check the hydraulic pump belt for excessive wear, cracks, or damage. Replace if necessary.



Separation

- Check the drive belt tension, if the tension is incorrect adjust the drive belt tension. A deflection of 1/8" to 3/16" (3 to 5 mm) under a load of 13.6 lbs (6.2 kgf) pressed in the middle of the span. If the belt tension is not within 1/8" to 3/16" (3 to 5 mm) adjustment is required.
- 8. Re-install the transmission and belt cover before operating the tractor.

Adjusting Hydraulic Pump Belt Tension

A WARNING

Avoid Personal Injury!

Fingers or loose clothing can get caught in rotating parts. Shut off the power unit engine, remove the ignition key, and wait for all moving parts to stop rotating before working on the tractor.

- 1. Park the tractor on a level surface.
- 2. Engage the parking brake and shut off the engine.
- 3. Remove the key from the ignition switch and allow the engine to cool.
- 4. Press the button on the electrical system circuit breaker to disconnect the battery power.
- 5. Remove the transmission and belt cover located to the left of the operators seat.
- 6. To increase the belt tension, loosen the 3/8" flange nut (A).



7. Loosen the 3/8" flange nut (B).



- 8. Tighten the 3/8" flange nut (C) until the belt reaches the desired tension.
- 9. Tighten the 3/8" flange bolt (B) against the bracket (D).
- 10. Tighten the 3/8" flange nut (A) to hold the bracket securely in place.
- Check the drive belt tension, if the tension is incorrect adjust the drive belt tension. A deflection of 1/8" to 3/16" (3 to 5 mm) under a load of 13.6 lbs (6.2 kgf) pressed in the middle of the span. If the belt tension is not within 1/8" to 3/16" (3 to 5 mm) adjustment is required.
- 12. Reinstall the transmission and belt cover before operating the tractor.

Cleaning Engine Compartment & Engine

Clean the engine compartment and engine daily or prior to each use, to reduce the risk of engine overheating or ignition of accumulated debris.

- 1. Park the tractor on a level surface.
- 2. Engage the parking brake and shut off the engine.
- 3. Remove the key from the ignition and allow the engine to cool.
- 4. Open the engine access panel, as well as the radiator access panel.
- 5. Remove accumulated debris and dust from the engine compartment and engine.
- 6. Refer also to Cleaning The Radiator And Screen section of this manual.

Cleaning The Battery and Terminals

- 1. Park the tractor on a level surface.
- 2. Engage the parking brake and shut off the engine.
- 3. Remove the key from the ignition switch.
- 4. Tilt the seat forward and fasten in place with the seat prop.
- 5. Disconnect and remove the battery
- 6. Wash the battery with a solution of four tablespoons of baking soda to 1 gallon (3.8 L) of water. Be careful to not get the soda solution into the cell.
- 7. Rinse the battery with clean water and dry.
- 8. Clean the battery posts and battery cable terminals with a wire brush.
- 9. Install the battery back into the tractor.
- 10. Apply dielectric grease to the battery terminals to prevent corrosion.
- 11. Place the covers back over the battery terminals.

Charging The Battery

DANGER

Batteries produce explosive gases. Charge the battery in a well ventilated space where the gases produced by charging can dissipate. Do not charge where the battery could be exposed to sparks, open flames, or other sources of ignition.

Never charge a frozen battery, as it may explode. Allow the battery to warm up and inspect for cracks or damage before charging.

To preserve optimum battery performance and life, do not allow the battery to stand in a discharged state for long periods of time. If the battery is not being used, check the battery voltage every 30 days and recharge the battery if the voltage drops to 12.4 volts or lower.

Keep the battery fully charged in cold weather to prevent damage due to freezing.

- 1. If possible, remove the battery from the tractor before charging.
- 2. Refer to the battery charger's manual for specific charging instructions.
- If electrolyte is expelled or excessive gassing occurs, or if the temperature of the battery exceeds 125° F (52° C), charging must be temporarily stopped to allow the battery to cool. After cooling, reduce the charging rate before starting the charger again.

Jump Starting Procedure

A DANGER

The battery produces a flammable and explosive gas. The battery may explode.

- Wear eye protection and gloves.
- Do not jump start a cold or frozen battery. Allow the battery to warm up and inspect for cracks or damage.
- Do not jump start a cracked or damaged battery.
- Do not attempt to jump start the tractor using a battery of a different voltage.
- 1. Inspect the discharged battery for terminal corrosion and loose connections. Clean the terminals and tighten the connections prior to jump starting.
- 2. Make sure the vehicle used to jump start the tractor has a 12 volt, negative ground, electrical system.
- 3. Pull the boosting vehicle up close to the disabled tractor. Be sure the vehicles do not touch.
- 4. Shut off the boosting vehicle's engine and set the parking brake.

A CAUTION

Attempting to start the disabled unit with the boosting vehicle's engine running could cause damage to the regulator.

- 5. Connect one end of the positive (+) booster cable to the discharged battery's positive (+) terminal.
- Connect the other end of the positive (+) booster cable to the booster battery's positive (+) terminal.
- 7. Connect the negative (-) booster cable to the booster battery's negative (-) terminal.
- 8. Connect the other end of the negative (-) booster cable to the disabled power unit's ground stud.
- 9. Start the disabled power unit and remove the booster cables in reverse order of installation (negative booster cable first).

Replacing Fuses

- 1. Park the tractor on a level surface.
- 2. Engage the parking brake and turn off the engine.
- 3. Remove the key from the ignition switch.
- 4. Press the electrical system circuit breaker button to disconnect the battery power.
- 5. Open the fuse panel access door located on the rear of the tractor above the right fender assembly.
- 6. Remove the upper and lower fuse block covers as required.
- 7. Identify and pull the defective fuse from the socket.



- 8. Insert a new fuse into the socket. Be certain to use the correct amperage fuse or damage may occur to the tractor.
- 9. Reinstall the upper and lower fuse block covers.
- 10. Reset the electrical system circuit breaker.

Replacing Light Bulbs

The work lights, taillights, turn signals, and cultivation lights are equipped with LEDs and do not use a replaceable bulb. If a light is no longer functioning the entire light must be replaced. Replacement lights can be purchased at www.Tilmor.com

BPTO Belt Inspection

WARNING

Always set the parking brake, shut off power unit engine, remove the ignition key, and ensure all moving parts have come to a complete stop before inspecting components or attempting any repair or adjustment.

Inspecting the BPTO of the tractor (if equipped) can prevent sudden belt failure by finding problems before they cause the belt to break. Inspect the BPTO belt prior to operation, as part of the daily inspection or anytime a problem is suspected. There may be a BPTO belt problem if there is a squealing or chattering sound, or the smell of a slipping belt.

- 1. Park the tractor on a level surface.
- 2. Engage the parking brake and shut off the engine.
- 3. Remove the key from the ignition switch.
- 4. Check the BPTO belt for excessive wear, cracks, or damage. Replace if necessary.



Clutch Pedal Adjustment

A WARNING

Always set the parking brake, shut off power unit engine, remove the ignition key, and ensure all moving parts have come to a complete stop before inspecting components or attempting any repair or adjustment.

- 1. Park the tractor on a level surface.
- 2. Engage the parking brake and shut off the engine.
- 3. Remove the key from the ignition switch.

- 4. Lean the operators seat forward.
- 5. Remove the inspection cover (A) from the transmission.



6. With the clutch pedal not engaged verify the distance between the throw out bearing (B) and clutch fork (C) is no greater than 1/8" and no less than 1/16".



7. To adjust the distance, locate the clutch arm stop bolt (D).



- 8. Adjust the stop bolt in or out until the desired distance is achieved.
- Adjust the brake pedal adjustment rod (E) so that the brake pedal is 1/4" lower than the brake pedals to prevent over engagement of the clutch.



Steering Wheel Adjustment

- 1. Park the tractor on a level surface.
- 2. Engage the parking brake and turn off the engine.
- 3. Remove the key from the ignition switch.
- 4. Loosen the lower steering pivot mounting bolt (B).



- 5. Remove the upper steering pivot mounting bolt (A).
- 6. Move the steering pivot to the right or left aligning the pivot with the desired mounting hole.
- 7. Install the upper pivot bolt through the pivot and steering wheel mount.
- 8. Torque the upper and lower steering pivot mount bolts to 31 ft-lbs (42 Nm).

Tire Pressure

Check the tire pressure prior to operation, as part of the daily inspection. Keep tire inflation within the proper range to prevent premature wear and/or poor traction.

Tire Location	Pressure
Front	30 psi (207 kPa)
Rear	34 psi (234 kPa)

ROPS And Seat Belt Inspection



Failure to inspect and maintain the Roll-Over Protection System and seat belt can lead to serious injury or death.

If any part of the ROPS experiences structural damage, the entire ROPS must be replaced

Inspect the roll bar and seat belt prior to operation, as part of the daily inspection.

- Inspect the roll bar for damage, missing components, and loose or missing hardware. Replace any damaged or missing components and tighten loose hardware prior to operating the tractor.
- 2. Inspect the seat belt webbing for cuts, abrasions, fraying, or excessive wear.
- Inspect the seat belt webbing for damage from exposure to the sun's ultraviolet rays. If the original color of the webbing is extremely faded, the physical strength of the webbing may be deteriorated.
- 4. Inspect the seat belt webbing for dust and dirt. If the webbing is packed with dirt, the physical strength of the webbing may be deteriorated.
- 5. Inspect the seat belt webbing for stiffness. If the webbing is no longer flexible, the physical strength of the webbing may be deteriorated.
- 6. Inspect the seat belt buckle and latch for damage, cracks, or excessive wear.
- 7. Inspect the seat belt for proper operation. The seat belt should latch securely and release smoothly. Seat belt adjustment should be accomplished without excessive resistance.

If any problems are detected during this inspection, the component must be replaced prior to operating the tractor.

Parking Brake Inspection & Adjustment

- 1. Park the tractor on a level surface.
- 2. Shut off the engine and remove the key from the ignition switch.

A WARNING

The parking brake must be disengaged as part of the adjustment procedure. Park the tractor on a level surface and place wheel chocks in front and back of the wheels to prevent the tractor from rolling forward or backward.

- 3. Place wheel chocks in front and back of the rear wheels to prevent the tractor from rolling.
- 4. With the parking brake handle in the disengaged position, turn the end of the handle to clockwise to tighten the parking brake tension. Turn the end of the handle counter clockwise to loosen the parking brake tension.
- 5. The minimum engagement force required to set the parking brake effectively is 85 lbf (378 N).

Storage

Preparing the Power Unit for Storage

- 1. Clean the power unit.
- 2. Inspect for loose or missing hardware, damaged components, or signs of wear.
- 3. Inspect the ROPS structure and seat belt for damage or signs of wear.
- 4. Inspect safety decals. Replace any safety decals that are faded, illegible, or missing.
- 5. Inspect hydraulic hoses for leaks and/or wear. Service as required.
- 6. Inspect hydraulic hoses, hydraulic fittings, and fuel lines to ensure tight leak free connections.
- 7. Ensure parking brake tension is properly adjusted.
- 8. Inspect the electrical system and connections.
- 9. Test the operator safety interlock system.
- 10. Inspect the BPTO pulley and belt (if equipped) for damage or excessive wear. Service as required.
- 11. Check the hydraulic oil level.
- 12. Check the coolant level. Add fluid or service as required.
- 13. Ensure the radiator screen, air cleaner, and engine compartment are clean.
- 14. Check tires for proper inflation.

15. Grease and lubricate all points specified in the maintenance section. Wipe off any excess grease or oil.

After the above steps have been performed, complete the preparation for storage by performing the steps for either long term storage (4 months or longer) or short term storage (less than 4 months).

Long Term Storage (4 Months or Longer)

- 1. Change the engine oil to prevent damage that can be caused by acidic build up in used motor oil.
- 2. Drain all fuel out of the fuel tank, start the tractor and allow to run until the engine stops to ensure all fuel is out of the fuel lines, carburetor passages, etc.
- 3. Turn the key to the Off position and remove.
- 4. Engage the parking brake.
- 5. Turn the fuel shut-off valve to the Off position.
- 6. Press the button on the electrical system circuit breaker to disconnect the battery power.
- If the tractor is being stored in a cold climate (below 35° F (2° C)), remove the battery from the tractor and store in a warm location. Check the battery charge level periodically and charge the battery, if necessary.

Short Term Storage (Less than 4 Months)

- 1. Add a quality diesel fuel treatment to the fuel tank. Follow the manufacturer's recommended mixing ratios.
- 2. Start the power unit's engine and run for 10 minutes to allow the fuel stabilizer to travel through the fuel system.
- 3. Turn off the power unit engine and remove the key.
- 4. Engage the parking brake.
- 5. Turn the fuel shut-off valve to the Off position.
- 6. Press the button on the electrical system circuit breaker to disconnect the battery power.
- 7. Check the battery charge level periodically and charge the battery, if necessary.

Removing the Power Unit from Storage

- 1. Clean the power unit to remove any accumulated dust or debris.
- 2. Inspect the power unit as instructed in the daily inspection section of this manual.
- 3. Test the power unit to ensure all components and systems are working properly.

Maintenance Schedule

			/	/	/	Tilm	or 52	20M	- Va	ngua	ard E	Brigg	gs ar	nd S	tratt	on - :	3800	000	/	/		/	_	/	/	/	/
						/	/	/	/	/	/	/		/		/ .	Γ.	/ /	/ /	Γ.	/		/		/		/ /
Maintananaa			`ω/	' /		Ž/	/	' /	./	./	./	./	./	./	./	./				./		./	./	./	./	./	5/
Maintenance		13	\$ 3	8/5	/~	3/	/ 🖇	?/ ä	§] [§/	§/	\$/	§/	\$/	§/	\$] ž	<i>]</i> [\$/ \$	7 3	1	\$/	\$/	§] [§/ ;	§/	\$/\$	3/
Schedule		8	5	[Ž]	12	' /	2) Ž	5	Ž	5) Z	5	5	5	3	5	5	5	5	5	5	5	5	5	8	'./
	18	\leq	S/ ;	Ž/*	ð/ ;		8/.	S.	S/.	N.	Ń.	S.	5/	\$	\$	5/:	5/	8	5/ <u>^</u>	V.	Ý.	8	۶Ĩ.	8/	51.	5	
	/ *	/ *	/ 7	17	10	ZZ	7 8	7 4	7 8	7 8	7 7	7 4	7 8	7 7	7 4	7 7	7	7	$\overline{\mathbf{r}}$	P V	7	7 4	7 8	7 4	7 7	7 ×	ΖŠ
	2	4		r –		Grea	ase o		ricati	on: S	ee L		ation	Sect	ion		1		1	/						-	
	2	1	*			×	*	*	*	×	*	*	*	×	*	*	*	*	*	*	*	×,	*	۲,	*		
Inner Lie Rod Ends	2	1	*			*	√	*	*	¥	*	*	*	*	*	*	*	*	*	*	✓	*	*	۲,	*		
Front Axle Pivot Tubes	1	1	√			✓	√	V	v	▼	√	▼	√	✓	√	▼	√	√	 ✓ 	*	√	▼	√	۲,	v		
Front Wheel Hubs	2	1	√			✓	√	Ĭ,	√	✓	√	Ĭ,	√	✓	√	*	√	√	√	*	√	▼	√	<u>۲</u>	v		
Front Hitch Cylinder	2	1	*			*	√	*	*	¥	*	*	*	*	*	*	✓	*	*	*	✓	*	*	۲,	*		
Rear Hitch Cylinder	2	1	√			✓	√	Ĭ,	v	▼	√	▼	√	✓	√	▼	√	√	√	*	√	▼	√	۲,	v		
Iransmission	2	1	√			✓	√	Ĭ,	√	✓	√	Ĭ,	√	✓	√	*	√	√	√	*	v	▼	√	<u>۲</u>	v		
Seat Slide	2	#	✓			✓	v	1	✓	√	v	1	✓	✓	~	✓	v	✓	✓	✓	✓	✓	•	•	~		
Ohaala Eastina Oilli				<u> </u>		-		-		Engi	ine!	-		1								_		_		_	
Uneck Engine Oil Level				-	~	<u> </u>		<u> </u>				<u> </u>					-							-			
Change Engine Oil & Filter				*		<u> </u>	V	<u> </u>	v		v	<u> </u>	v	<u> </u>	v		V		V		V		v	<u> </u>	V		
(Gasoline Engines)						Co	nsult	Engin	e Ow	ner's	Manu	ial; Fo	bllow S	Servic	e Inte	ervals	for H	eavy l	oads	and	High	Temp	eratu	ires*			
Inspect Primary Air Filter					1																			<u> </u>			
Replace Primary Air Filter			**			-	**	<u> </u>	1	-	**	<u> </u>	1		**		1		**		1	-	**	-	1	-	
Service Engine: Check Value Clear	ance			-		-		-				-			1					~				-	1		
Clean Oil Cooler Fins	ance		**							F.			./		-					*	1	-		-	-	-	
Clean Engine Compartment Engine	- <i>8</i>									-												-		-		-	
Engine Rotating Screen	Ξ, α		**		✓																						
Replace Fuel Filter			✓										✓								1						
· · · · · · · · · · · · · · · · · · ·									Hydi	aulic	Syst	em															
Check Hydraulic Oil Level					✓				Ĺ		ļ,																
Change Hydraulic Filters [%]							~			1					✓					✓					1		✓
Change Hydraulic Oil										1					1					✓					1		1
, , ,										Bral	kes																
Brake System Inspection							1				✓				1				✓				✓			✓	
Fluid Replacement			**																					-			
Brake Pad Replacement			**																								
Brake Rotor Replacement			**					-				-															
									Pa	rkina	Brak	ke															
Parking Brake Inspection & Adiustn	nent				1																						
5 . <u></u>										Elect	rical																
Clean Battery Terminals & Compart	tment	:	✓								_															√	
										nspe	ction							· J									
Inspect Operator Interlock System					✓					Ĺ																	
Inspect ROPS structure and seatbe	elt				1																						
Inspect for Loose, Missing, or Worr	ı																							1			
Components					×									L								L		L		L	
Inspect Battery, Electrical Connection	ons, a	and			1																						
Lights																											
Inspect Belts, Fuel Lines, and Hydra	aulic				1																						
Check Tite Press										_				<u> </u>			_					-		-		-	
Check Freet Wheeld we block				<u> </u>	•	<u> </u>		<u> </u>				<u> </u>												<u> </u>			
Check Front Wheel Lug Nuts. Torque to 95 ft-lbs (128 Nm)						1	1				✓				1				1				✓				
Check Rear Wheel Stud Bolts				-		-		-		-		-										-		<u> </u>		-	
Torque to 130 ft-lbs (176 Nm)																											
* If heavy load, high temperature, or dusty cor	ndition	service	e inter	vals ar	e not s	specifie	ed, Tilı	nor re	comm	ends s	servicir	ng mo	re freq	uently	at 1/2	the sta	ndard	servic	e inter	val.							
** Operation in severe conditions may require	more f	reque	ent serv	vice int	ervals																						
! Consult Engine Owner's Manual for engine	oil info	rmatio	on and	compl	lete se	rvicing	inforr	nation																			
@ Optional Equipment																											
* Grease Until Fresh Grease is visible																											
# Oncon Dased Opray Lubricant	01	7			050				50 /																		
% Hydraulic filters initial change @ 100 hours	Hydraulic filters initial change @ 100 hours. Change oil and filters @ 250 hours, then every 250 hours.																										

Maintenance Checklist

					Tilm	or 5	20M	- Va	ngu	ard	Brig	gs a	nd S	tratt	on -	3800	000										
Maintananaa		/	5			, F	/																				 \$
Checklist				\$/ £	15	7	/ 🕯	5/ j	ة/ في الح	\$/.š	\$/ å	ة [أ	\$/.;	في الخ	ة <i>ا</i>					1,0		ة [۶/ چُ	\$/.j			3/
Oncokiist	Ι.	2	2)	NET -	5	2	5	8	5	3	5	3	5	3	3	8	5	8	5/	8	5	3	5	S/	5	8	, A
	$\binom{2}{*}$	7*	%	$2/\frac{2}{3}$	/	\$ \$	/ ₹	/ ₹	/ 🗧	/ 🗧	74	14	/ 4	¥ 🗧	×/ ₹	/ ₹	/ 🗧	/ ₹	17	/ *	/ ₹	/ 🗧	∛∛	7 4	ž/ ₹	/ 2	¥,
						Grea	ase &	Lub	ricati	on: S	See L	ubric	ation	Sect	ion											_	
Outer Tie Rod Ends	2	1																									
nner Tie Rod Ends	2	1																									
Front Axle Pivot Tubes	1	1		_																							
Front Wheel Hubs	2	1		_																							
-ront Hitch Cylinder	2	1		-																						<u> </u>	
Rear Hitch Cylinder	2	1		-						_														_		<u> </u>	
	2			-																						-	
Seat Slide	2	#				I				Eng	ino!																
Check Engine Oil Level																											
Change Engine Oil & Filter										-												-		-		<u> </u>	
Clean/Replace Spark Plugs (Gasolir	ne			4			neult	Engin		noric	Man	ual: E-		Sonia	o Int-		for L	0.01/1	oade	and	Hich	L Tom-	orot.	urec*	1	<u> </u>	
Engines)							nsuit	Engin	ie Ow	ners	wanu	iai, FC	woilow	Servic	e me	ivais		eavyi	Loads	anu	nign	remp	eratu	lies			
Inspect Primary Air Filter																											
Replace Primary Air Filter																											
Service Engine: Check Valve Cleara	ince			_																							
Clean Oil Cooler Fins				_																							
Clean Engine Compartment, Engine	, &																										
Replace Fuel Filter					-	-			-	-	-												-	-		-	-
•				-	_				Hydr	aulic	Syst	em											_				
Check Hydraulic Oil Level																											
Change Hydraulic Filters [%]																											
Change Hydraulic Oil																											
										Bral	kes																
Brake Inspection																											
Fluid Replacement				_																							
Brake Pad Replacement				_																							
Brake Rotor Replacement									Do	rking	Prok																
Parking Brake Inspection & Adjustm	ont			<u> </u>	1	-			га	Iking	Diar	l										1	1	-		—	
Parking brake inspection & Adjustin	ent			_	_					l Elect	rical												_				
Clean Battery Terminals & Comparti	ment																										
· ·				_					1	nspe	ction																
nspect Operator Interlock System																											
Inspect ROPS structure and seatbel	t																										
Inspect for Loose, Missing, or Worn																											
Components		a na d		_																							
lights	ns, a	ano																									
nspect Belts, Fuel Lines, and Hydra	ulic																									Γ	
				-		<u> </u>		<u> </u>		<u> </u>		<u> </u>		<u> </u>								L		<u> </u>		⊢	
Check Fire Pressure.				-		<u> </u>		<u> </u>		<u> </u>		<u> </u>		<u> </u>				\square				<u> </u>		<u> </u>		<u> </u>	
Front wheel Lug Nuts. Forque to 95 ft-lbs (128 Nm)																											
Check Rear Wheel Stud Bolts.																											
If heavy load, high temperature, or dusty cond	dition	service	e inter	vals a	e not :	specifi	ed, Tili	nor re	comm	ends :	servici	l ng moi	re frec	uently	at 1/2	the sta	andard	servic	e inter	val.		I			1	<u> </u>	
* Operation in severe conditions may require r	nore 1	freque	nt ser	vice in	tervals									,													
Consult Engine Owner's Manual for engine of	oil info	rmatio	n and	l comp	lete se	ervicing	g inforr	nation																			
g: Optional Equipment																											
Silicon Based Spray Lubricant																											
% Hydraulic filters initial change @ 100 hours.	Chan	ge oil a	and fi	lters (a	2 500 H	nours,	then e	very 1	000 hc	ours.																	

Tilmor Maintenance Log

Model Number: _____

Serial Number: _____

Date:	Hours:	Description of Repairs/Service	Initials

Tilmor Maintenance Log

Date:	Hours:	Description of Repairs/Service	Initials

Engine

Symptom:	Possible Cause:
Starter will not engage.	Battery disconnect switch is in the Off position.
	Blown fuse.
	Tractor transmission is not in neutral.
	Low battery voltage.
	BPTO is engaged (if equipped).
Engine cranks, but will not start.	Fuel shut-off valve is turned off.
	Insufficient fuel level.
	Faulty fuel pump.
	Plugged fuel filter.
	Fuel tank vent not operating.
	Obstruction in the fuel line.
	Poor engine compression.
Engine runs rough.	Plugged or partially plugged air filters.
	Plugged or partially plugged fuel filters.
	Fuel tank vent not operating properly.
	Stale, dirty fuel or wrong seasonal fuel mixture.
	Insufficient fuel level.
	Faulty fuel pump.
	Dirty or faulty fuel injectors.
	Incorrect valve clearance.
	Valve seat failure.
Engine low on power.	Plugged or partially plugged air filters.
	Plugged or partially plugged fuel filters.
	Dirty or faulty fuel injectors.
	Low cylinder compression.
Engine overheats.	Dirty radiator screen.
	Low coolant level.
	Debris in the engine compartment.
	Defective radiator cap.
	Defective thermostat.
	Loose alternator fan belt.
	Blown head gasket.

TROUBLESHOOTING

Engine (Continued)

Symptom:	Possible Cause:
Oil light comes on when running.	Low oil level.
	Faulty oil sender.
	Faulty or plugged oil pump.
Excessive fuel consumption.	Plugged or restricted air filters or hose.
	Dirty or faulty fuel injectors.
Excessive oil consumption.	Check for leaks.
	Incorrect oil viscosity.
	Plugged or restricted air filters and or hose.
	Worn rings or cylinder walls.
	Worn or faulty valves.
Low oil pressure	Engine oil level is low.
	Improper oil viscosity.
	Oil filter is plugged.

Hydraulic

Symptom:	Possible Cause:
Mid mount hitch inoperable.	Hydraulic oil level is low.
	Excessive load on mid mount hitch.
	Plugged hydraulic filter.
	Faulty hydraulic cylinder.
	Loose or broken hydraulic pump belt.
Rear hitch inoperable.	Hydraulic oil level is low.
	Excessive load on rear hitch.
	Plugged hydraulic filter.
	Faulty hydraulic cylinder.
	Loose or broken hydraulic pump belt.

TROUBLESHOOTING

Electrical

Symptom:	Possible Cause:	
Battery does not charge.	Loose or corroded connections.	
	Broken or loose wire in the charging system.	
	Blown fuse in the charging system.	
	Defective battery.	
	Loose alternator belt.	
	Defective alternator.	
Lights are inoperable.	Blown fuse.	
	Broken wire.	
	Defective Light Switch.	
Starter Inoperative	Slipping alternator fan belt.	
	Operator not present in operators seat.	
	Transmission not in neutral.	
	PTO lever is engaged (if equipped).	
	Low battery output voltage.	

Wiring Diagram Reference Key



Wiring Circuit - Main Power / Ignition Switch Schematic



Wiring Circuit - Gauges / USB / AUX / Misc Fuse Block Schematic







Wiring Circuit - Engine Functions / Diesel - Gas Schematic



Troubleshooting - 57

Wiring Circuit - Head & Tail Light - Directional / Hazards Schematic



SPECIFICATIONS

Engine
Model
Manufacturer
Model Number
Type
Cylinders
Displacement
Engine Gross HP
Cooling System
Alternator
Electrical
Battery
Voltage.
Power Train
Four Speed Transmission Manual 4 Forward 1 Poverse
Two Speed Transmission
Fwd Speed (High)
Prodeco (Low)
Controls & Instrument Panel
Steering
BPTO
Throttle Control
Gauges Tachometer, Volt, Water Temperature, Fuel, Speedometer
Parking/Emergency Brake
Other Features
Standard Tires Front
Standard Tires Rear
Attachment System

*May vary based on tire size, type, and inflation

SPECIFICATIONS

Dimensions

Wheelbase			85.8 in (218 cm
Overall Length			127.8 in (325 cm
Overall Height (top of ROPS bar)			87.2 in (221 cm
Overall Width (narrow track)*			
Overall Width (wide track)*			
Weight**			
Tilmor LLC. Reserves the right to chan	ge any spe	ecifications without	notice.

* May vary based on tire size, type, and inflation.

** Weight varies based on engine size, tire options, and optional accessories.

Load Capacities

Maximum Tractor Weight	4000 lbs (1814 kg)
Front Axle	. 980 lbs (444 kg)
Rear Axle	3200 lbs (1451 kg)
Mid Mount Hitch	. 450 lbs (204 kg)
Rear Mount Hitch	. 500 lbs (226 kg)
Maximum Static Vertical Load On Receiver Hitch	. 500 lbs (226 kg)
Maximum Trailed Mass	2000 lbs (907 kg)

Fluid Capacities & Specifications

	Fluid Type	Capacity	Filter #1	Filter #2
Engine Oil	10W-30*	1.5 qts (1.4 L)	-	-
Hydraulic Oil	Mobifluid 424	6.5 qts (6.2 L)	21-0078	-
Transmission	Mobifluid 424	2.2 qts (2.1 L)	-	-
Final Drive	Mobifluid 424	.7 qts (.66 L) Each Side	-	-
Fuel System	Unleaded Gasoline up to E10 (Maximum 10% ethanol)	7.6 gal (3.7 L)	-	-
Brake Fluid	DOT 3	16oz (29.57mL)	-	-
Grease	Lithium Complex NLGI #2	Refer to Maintenance Chart	-	-

WARRANTY

STILMOR

Return Policy & Procedure

All new and unused products may be returned within 30 days of the ship date for a refund. If returning an item, first contact a Tilmor customer support representative at 1-844-255-5864 to obtain a return merchandise authorization (RMA) prior to shipping the item to Tilmor. Shipping costs for returns will be incurred by the customer. Refunds may be subject to a 10% restocking fee.

Warranty

Contact a Tilmor customer support representative at 1-844-255-5864 immediately if a product purchased on tilmor.com should fail during the defined warranty period. Items purchased on tilmor.com may be manufactured by Tilmor LLC or one of our trusted partners. For all products not branded by Tilmor, the original equipment manufacturer's warranty statement will define period, policy and procedure.

Tilmor Warranty Period

Non-serialized Product - 1 Year

Unless otherwise stated, all non-serialized Tilmor products are protected against defects in materials and workmanship, under ordinary and normal use, for a period of one year from the shipping date. Warranties on non-serialized Tilmor products are not transferable.

Serialized Product - 2 Year or 1000 hours

Unless otherwise stated, all serialized Tilmor products are protected against defects in materials and workmanship, under ordinary and normal use, for a period of two years from the shipping date or 1000 hours on tractor hour meter (whichever comes first). Warranties on serialized Tilmor products are transferable.

Tilmor Warranty Policy

Tilmor LLC may opt to repair, replace, or issue a refund for Tilmor products that are defective or have sustained damage in shipping. The following actions and damages are excluded from warranty:

- deterioration due to normal wear and tear,
- damage caused by an act of nature (fire, flood, wind, etc.),
- damage caused by accident, improper usage or negligence.

Tilmor LLC reserves the right to approve warranty repair time, decide whether to send new parts and/or request old parts for review. Our intention is to be fair to all parties (i.e. customer, repair shop and Tilmor).

Tilmor Warranty Procedure

Contact a Tilmor representative immediately if a Tilmor product should fail during the defined warranty period. The representative will initiate a claim and determine the quickest method to resolve the issue. Tilmor does not have local dealerships and will work directly with the customer to resolve the problem. If the customer prefers, we will work with a technician of the customer's choice to perform the repair.