



Side Weight Kit Installation AU-9003

Go to www.tilmor.com/resources for complete parts list, additional resources and replacement part ordering.

Release Date: 06/04/2019
Document Number: 12-70025
Revision Number: 00



ATTENTION

Review safety information before operation.





Tools

9/16" Socket
Torque Wrench


Installation Time (estimated)

30 minutes


REQUIRED PARTS

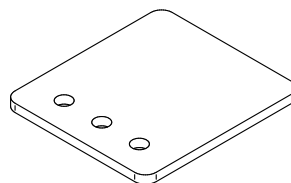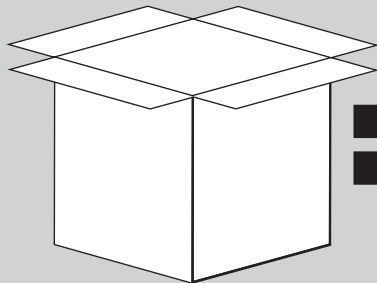


8x
Plate, Weight
AU-1041

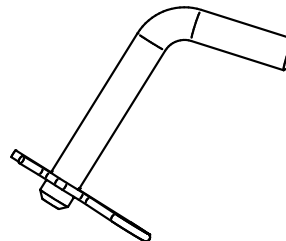


2x
Pin, Hitch 5/8" x 3"
03-0014

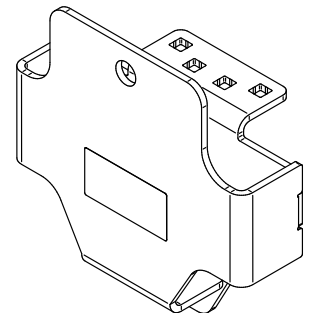

2x
Bracket Weight
Mount
AU-6023

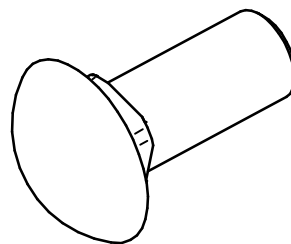


6x
Bolt, Carriage
3/8" X 3/4"
97-0606

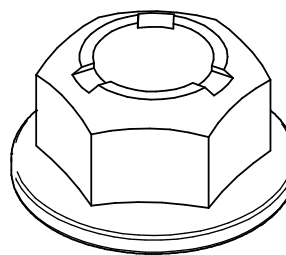


6x
Nut, Locking Flange
3/8"
99-E0136

LEFT SIDE INSTALLATION


 9/16" Socket, Torque Wrench

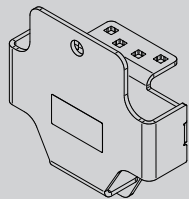


1x
Bracket Weight
Mount
AU-6023

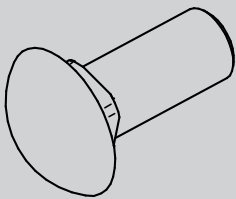


3x
Bolt, Carriage
3/8" X 3/4"
97-0606

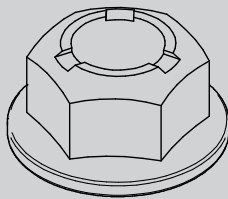





3x
Nut, Locking
Flange
3/8"
99-E0136

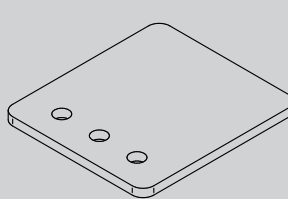

4x
Plate, Weight
AU-1041

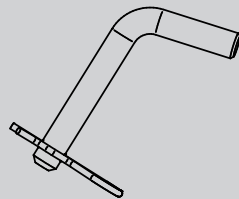


1x
Pin, Hitch 5/8" x 3"
03-0014

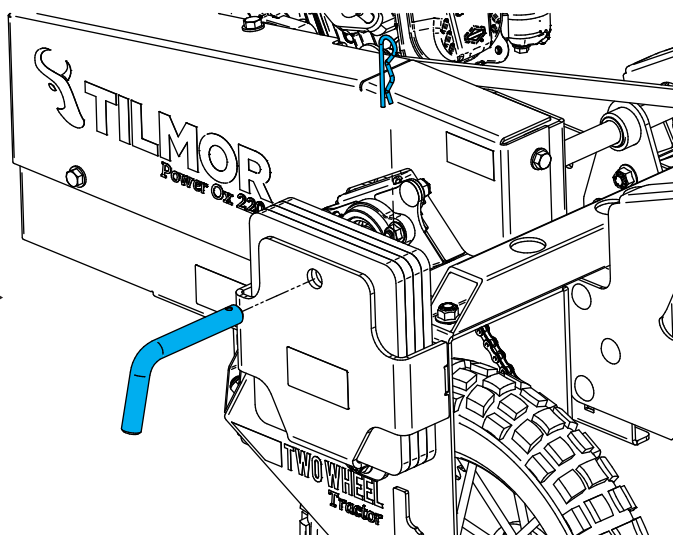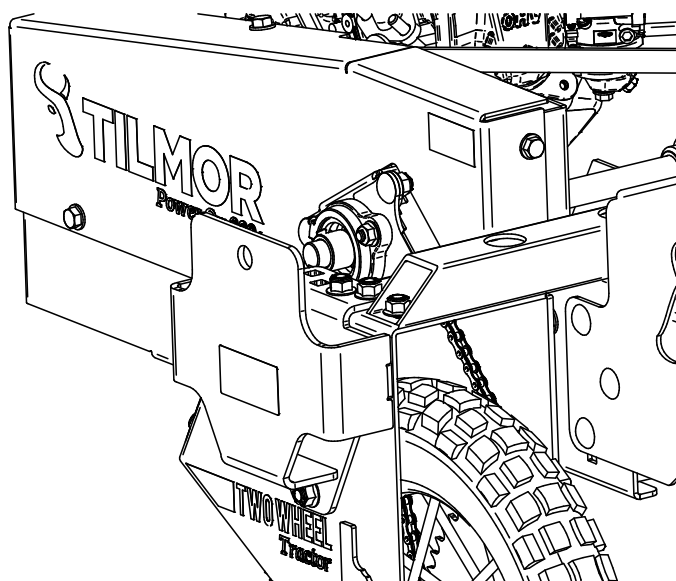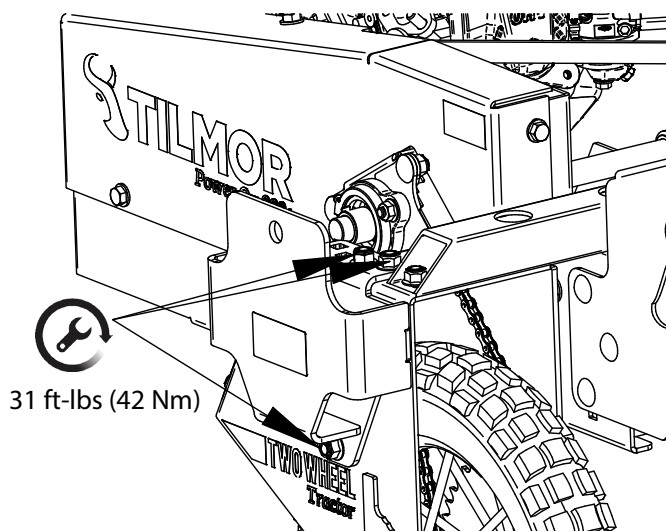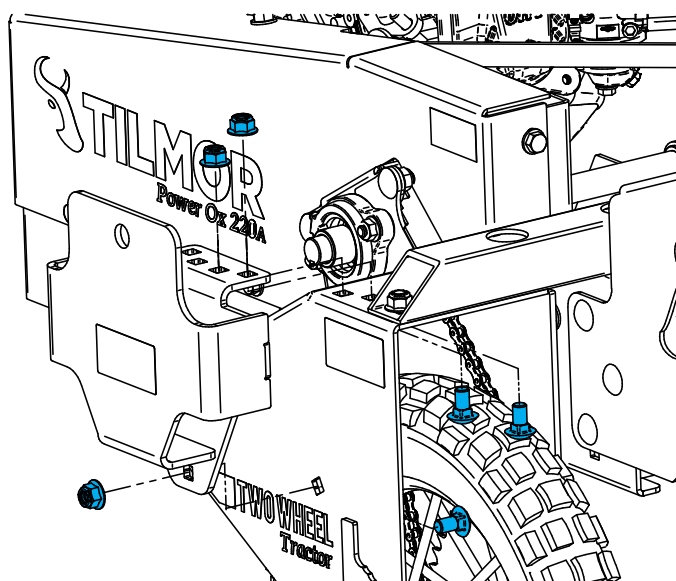


RIGHT SIDE INSTALLATION


 9/16" Socket, Torque Wrench

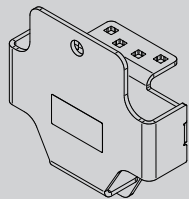


1x
Bracket Weight
Mount
AU-6023

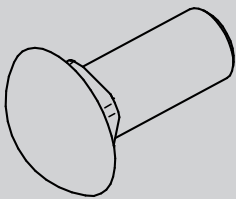


3x
Bolt, Carriage
3/8" X 3/4"
97-0606

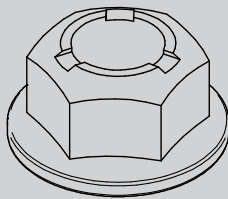

3x
Nut, Locking
Flange
3/8"
99-E0136

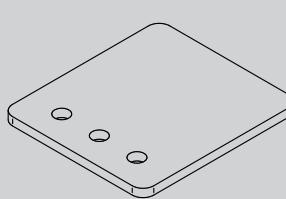

4x
Plate, Weight
AU-1041

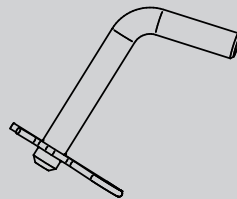

1x
Pin, Hitch 5/8" x 3"
03-0014

