


Go to [www.tilmor.com/resources](http://www.tilmor.com/resources) for complete parts list, additional resources and replacement part ordering.



Release Date: 02/19/2019  
Document Number: 12.70010  
Revision Number: 00

**ATTENTION**  
Review safety information before operation.


 Tools
3/4" Wrench 3/4" Socket Ratchet Torque Wrench

**Installation Time (estimated)** *10 minutes*


## REQUIRED PARTS

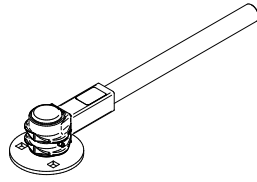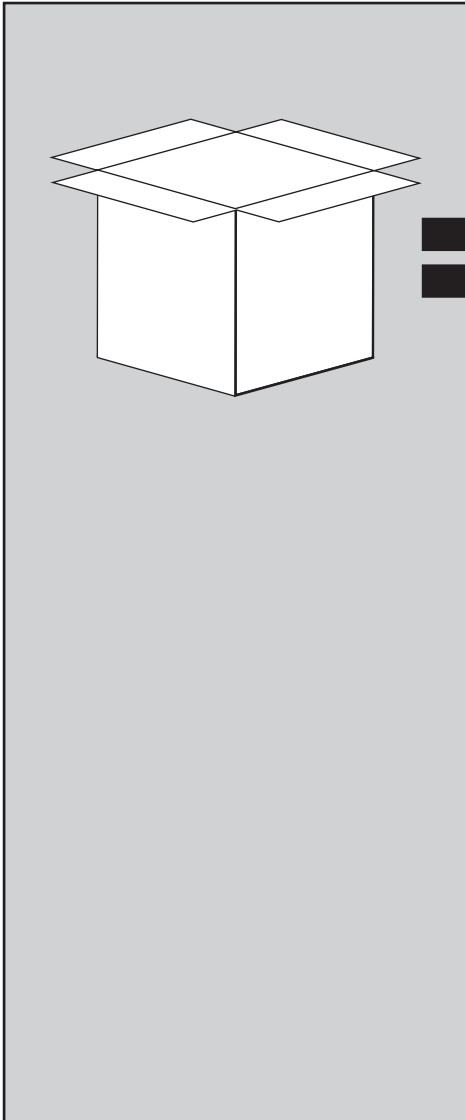


1x  
Mount

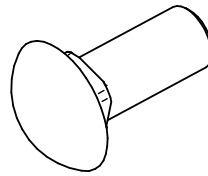

3x  
97.0810  
1/2" Carriage Bolt

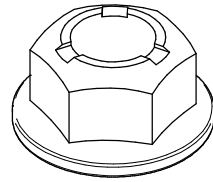

3x  
99.E0103  
1/2" Flange Nut


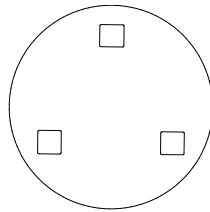


1x  
AW-1150  
Plate, Disc Mount



After the Assembly Procedure Is completed The Spyder Disc Mount assembly must be greased before use.

# ASSEMBLY

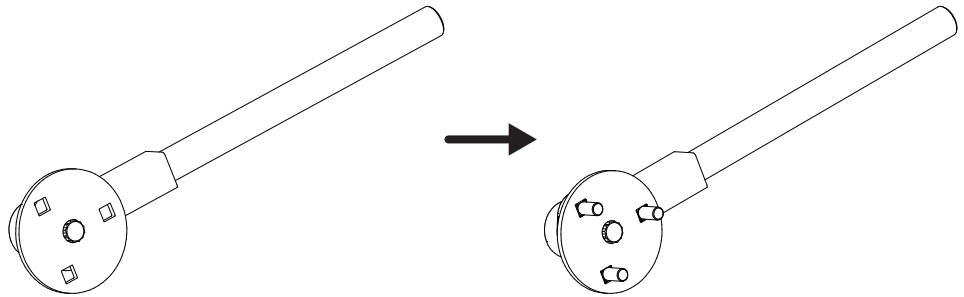
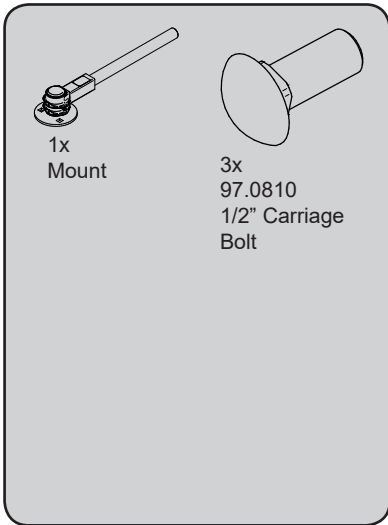


The carriage bolts must be installed as shown. Failure to install the carriage bolts as shown may result in damage to the mount.

1




3/4" Wrench, 3/4" Socket, Torque Wrench

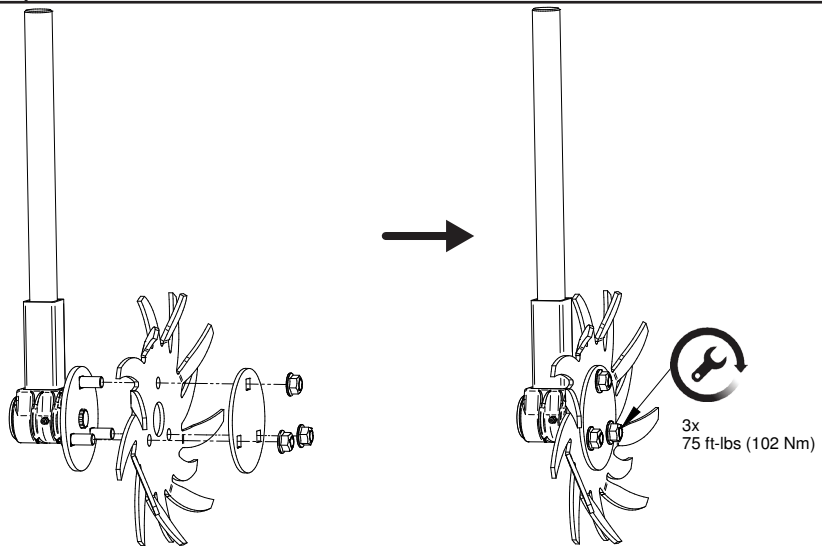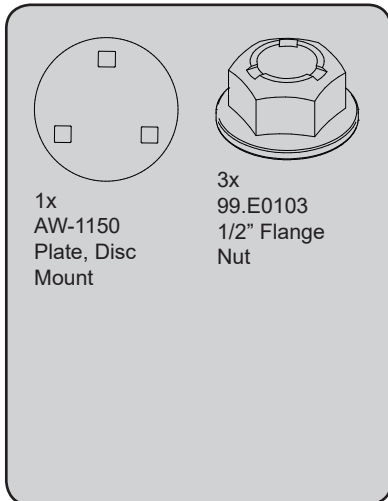

2



Grease

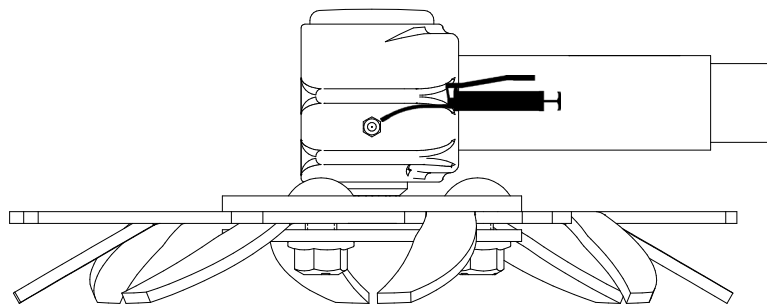

3